

## 2. Tire S204125


### A: INSPECTION S204125A10

- 1) Take stone, glass, nail etc. off the tread groove.
- 2) Replace tire:

#### CAUTION:

- When replacing a tire, make sure to use only the same size, construction and load range as originally installed.
- Avoid mixing radial, belted bias or bias tires on the vehicle.

- (1) When large crack on side wall, damage or crack on tread is found.
- (2) When the "tread wear indicator" appears as a solid band across the tread.

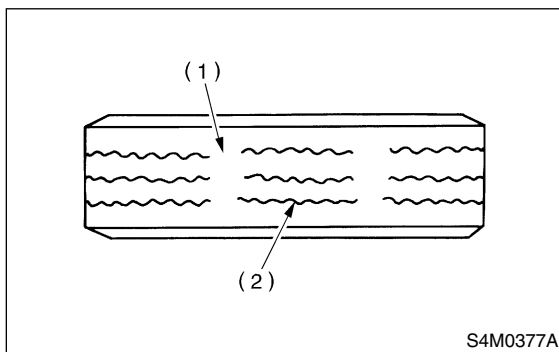

- (1) Tread wear indicator
- (2) Tire tread

- 3) When extremely biased wear on tire tread can be seen, after replacing tire, measure wheel alignment. <Ref. to FS-6, Wheel Alignment.>

### 1. TIRE ROTATION S204125A1001

If tires are maintained at the same positions for a long period of time, uneven wear results. Therefore, they should be periodically rotated. This lengthens service life of tires.

#### CAUTION:

**When rotating tires, replace unevenly worn or damaged tires with new ones.**

