

## 4. Aluminum Wheel S204130

### A: REMOVAL S204130A18

Refer to Steel Wheel for removal procedure of aluminum wheels. <Ref. to WT-5, REMOVAL Steel Wheel.>

### B: INSTALLATION S204130A11

Refer to Steel Wheel for installation procedure of aluminum wheels. < Ref. to WT-5, INSTALLATION, Steel Wheel.>

### C: INSPECTION S204130A10

Refer to Steel Wheel for inspection procedure of aluminum wheels. <Ref. to WT-5, INSPECTION, Steel Wheel.>

#### **Rim runout:**

Axial runout limit	Radial runout limit
1.0 mm (0.039 in)	

### D: CAUTION S204130A03

Aluminum wheels are easily scratched. To maintain their appearance and safety, do the following:

- 1) Do not damage aluminum wheels during removal, disassembly, installation, wheel balancing, etc. After removing aluminum wheels, place them on a rubber mat, etc.

- 2) While vehicle is being driven, be careful not to ride over sharp obstacles or allow aluminum wheels to contact the shoulder of the road.

- 3) When installing tire chain, be sure to install it properly not to have a slack; otherwise it may hit wheel while driving.

- 4) When washing aluminum wheel, use neutral synthetic detergent and water. Avoid using the cleanser including abrasive, hard brushes or an automatic car washer.