

9. Clear Memory Mode S004513

A: OPERATION S004513A16

1. WITHOUT SUBARU SELECT MONITOR

S004513A1602

Current trouble codes shown on the display are cleared by turning the ignition switch OFF after conducting the on-board diagnostics operation. Previous trouble codes, however, cannot be cleared since they are stored in the TCM memory which is operating on the back-up power supply. These trouble codes can be cleared by removing the specified fuse (located under the light or left lower position of the instrument panel).

CLEAR MEMORY:

Removal of No. 4 fuse (for at least one minute)

- The No. 4 fuse is located in the line to the memory back-up power supply of the TCM. Removal of this fuse clears the previous trouble codes stored in the TCM memory.
- Be sure to remove the No. 4 fuse for at least the specified length of time. Otherwise, trouble codes may not be cleared.

2. WITH SUBARU SELECT MONITOR

S004513A1601

Refer to SUBARU SELECT MONITOR for information about how to clear trouble codes.
<Ref. to AT-24, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.>