


3. Differential Gear Oil S502150

A: INSPECTION S502150A10

- 1) Park the vehicle on a level surface.
- 2) Remove the oil level gauge and wipe it clean.
- 3) Reinsert the level gauge all the way. Be sure that the level gauge is correctly inserted and in the proper orientation.
- 4) Remove it again and note the reading. If the differential gear oil level is below the "L" line, add oil to bring the level up to the "F" line.
- 5) To prevent overfilling the differential gear oil, do not add oil above the "F" line.

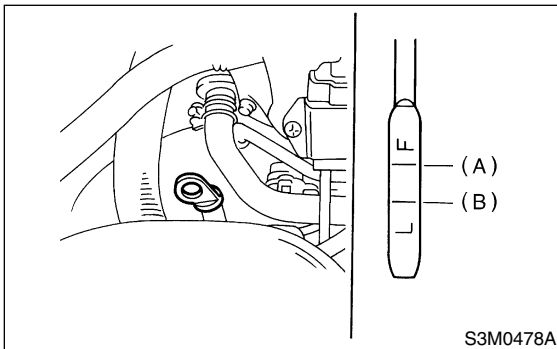

- (A) Upper level
(B) Lower level

B: REPLACEMENT S502150A20

- 1) Lift-up the vehicle.
- 2) Drain differential gear oil completely.

CAUTION:


Directly after the engine has been running, the differential gear oil is hot. Be careful not to burn yourself.

NOTE:

Tighten differential gear oil drain plug after draining differential gear oil.

Tightening torque:

44 N·m (4.5 kgf·m, 32.5 ft·lb)

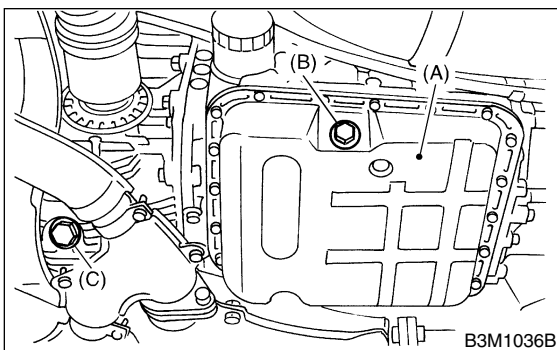

- (A) Oil pan
(B) Drain plug
(C) Differential oil drain plug

- 3) Pour gear oil into the gauge hole.

Recommended fluid:

Use GL-5 or equivalent.

Gear oil capacity:

1.2 l (1.3 US qt, 1.1 Imp qt)

- 4) Check the level of the differential gear oil. <Ref. to AT-11, INSPECTION, Differential Gear Oil.>