

15. Torque Converter Turbine Speed Sensor S502711

A: REMOVAL S502711A18

When removing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor".
<Ref. to AT-33, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION S502711A11

When installing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor".
<Ref. to AT-35, INSTALLATION, Front Vehicle Speed Sensor.>