

9. General Diagnostic Table S501257

A: INSPECTION S501257A10

Select Lever Does Not Move From "P" Position

| Symptom | Problem parts |
|-----------------------------------|---|
| Shift lock does not function. | <ul style="list-style-type: none"> ● Stop light switch ● Shift lock solenoid ● AT shift lock control module |
| Shift lock cannot be released. | <ul style="list-style-type: none"> ● Stop light switch ● Shift lock solenoid ● AT shift lock control module ● Inhibitor switch ● Ignition switch |
| Key interlock does not function. | <ul style="list-style-type: none"> ● Key warning switch ● "P" position switch ● Key lock solenoid ● AT shift lock control module ● Ignition switch |
| Key interlock cannot be released. | <ul style="list-style-type: none"> ● Key warning switch ● "P" position switch ● Key lock solenoid ● AT shift lock control module |
| Starter does not run. | <ul style="list-style-type: none"> ● Select cable ● Inhibitor switch ● Starter circuit |
| Back-up light does not light up. | <ul style="list-style-type: none"> ● Select cable ● Inhibitor switch ● Back-up circuit |

GENERAL DIAGNOSTIC TABLE

Control Systems

MEMO: