

5. Oil Seal S503143

A: INSPECTION S503143A10

Check oil seal portion for leakage. If leakage is found, replace the oil seal with new one.

B: REPLACEMENT S503143A20


- 1) Clean transmission exterior.
- 2) Drain gear oil completely.

NOTE:


Tighten drain plug after draining gear oil.

Tightening torque:

44 N·m (4.5 kgf·m, 32.5 ft·lb)

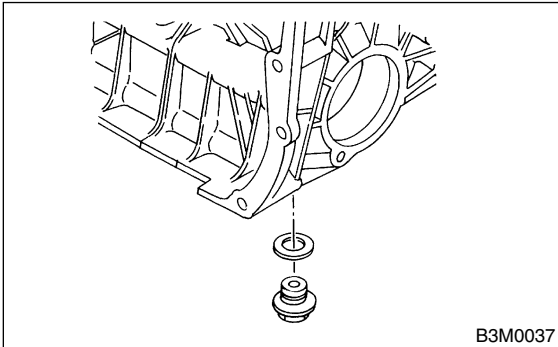


- 3) Remove rear exhaust pipe and muffler. <Ref. to EX-9, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX-10, REMOVAL, Muffler.>
- 4) Remove heat shield cover.
- 5) Remove propeller shaft. <Ref. to DS-13, REMOVAL, Propeller Shaft.>
- 6) Using ST, remove the oil seal.
ST 398527700 PULLER ASSY

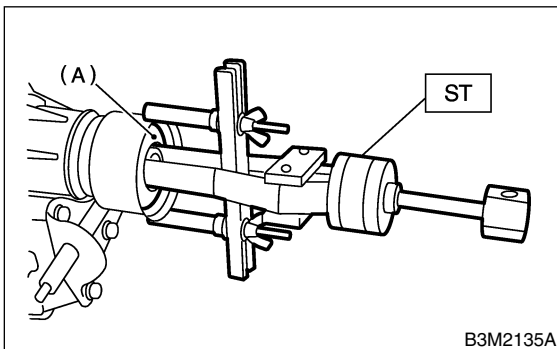

(A) Oil seal

- 7) Using ST, install the oil seal.
ST 498057300 INSTALLER

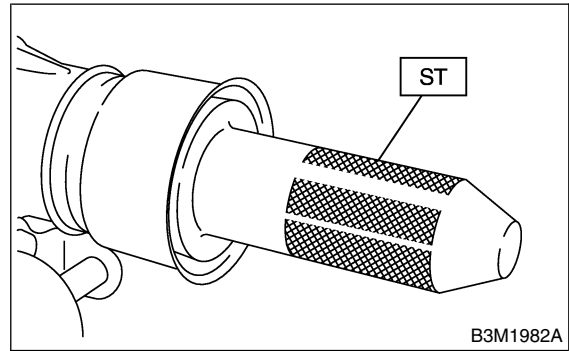

- 8) Install the propeller shaft. <Ref. to DS-14, INSTALLATION, Propeller Shaft.>
- 9) Install the heat shield cover.
- 10) Install the rear exhaust pipe and muffler. <Ref. to EX-9, INSTALLATION, Muffler.> and <Ref. to EX-10, INSTALLATION, Rear Exhaust Pipe.>
- 11) Pour gear oil and check the oil level. <Ref. to MT-26, REPLACEMENT, Transmission Gear Oil.>