

BASIC DIAGNOSTIC PROCEDURE

AIRBAG SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

Step	Value	Yes	No
1 Read DTC. <Ref. to AB-20, Read Diagnostic Trouble Code (DTC).> Is the normal code being detected?	Normal code detected.	Finish the diagnosis.	Go to step 2.
2 Read DTC. <Ref. to AB-20, Read Diagnostic Trouble Code (DTC).> Is the DTC being detected?	DTC detected.	Go to step 3.	Go to "Airbag Warning Light Failure".<Ref. to AB-24, Airbag Warning Light Failure.>
3 Perform the diagnosis. 1) Judge the possible cause from "List of Diagnostic Trouble Code (DTC)" <Ref. to AB-28, List of Diagnostic Trouble Code (DTC).> . 2) Inspect using "Diagnostic Chart with Diagnostic Trouble Code (DTC)". 3) Repair the cause of the trouble. 4) Perform the clear memory mode. <Ref. to AB-22, Clear Memory Mode.> 5) Perform the inspection mode. <Ref. to AB-21, Inspection Mode.> 6) Read DTC. Is the DTC being detected?	DTC detected.	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.

AB-2