


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)


3. General Description

A: CAUTION

- When servicing a vehicle, be sure to turn the ignition switch OFF, disconnect the ground cable from the battery, and wait for more than 20 seconds before starting work.
- The airbag system is fitted with a backup power source. If the airbag system is serviced within 20 seconds after the ground cable is disconnected, it may inflate.

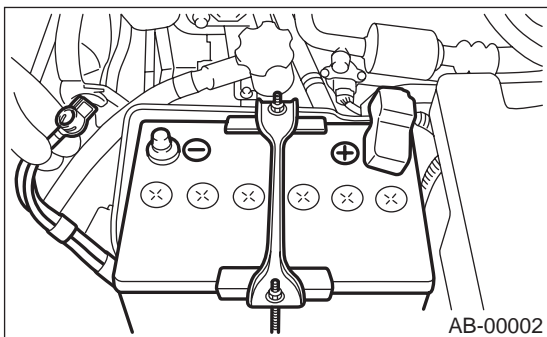


- If the airbag warning light illuminates, repair the vehicle immediately. Airbag or pretensioner may inflate incorrectly, or not inflate in collision.
- If sensors, airbag module, airbag control module pretensioner, and harness are deformed or damaged, replace them with new genuine parts.
- Do not use the airbag system and pretensioners on other vehicles. When replacing parts, be sure to replace them with new parts.

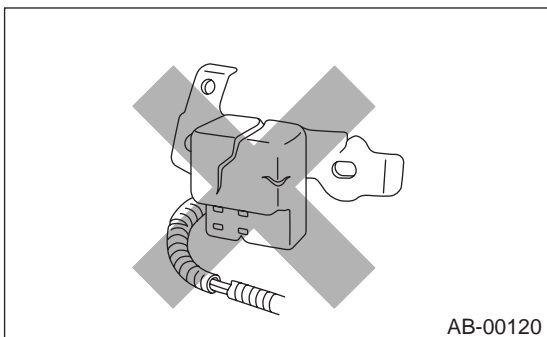


- When checking the system, be sure to use a digital circuit tester.

Use of an analog circuit tester may cause the airbag to activate erroneously.

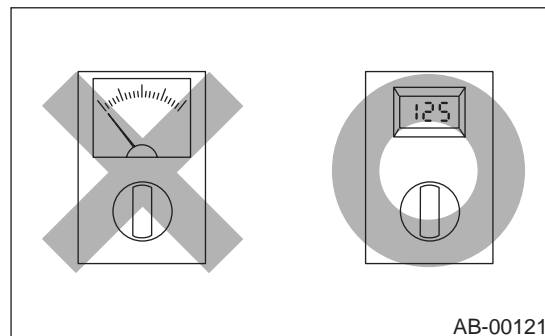

- When checking, use a test harness. Do not directly apply the tester probe to any connector terminal of the airbag.

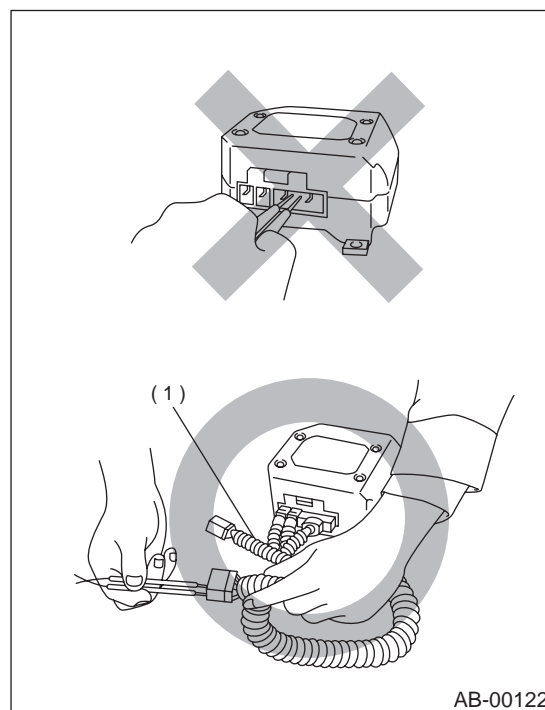


(1) Test harness

- Do not drop the airbag modulator parts, subject them to high temperature over 93°C (199°F), or let water, oil, or grease get on them; otherwise, the in-


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)


ternal parts may be damaged and reliability greatly lowered.

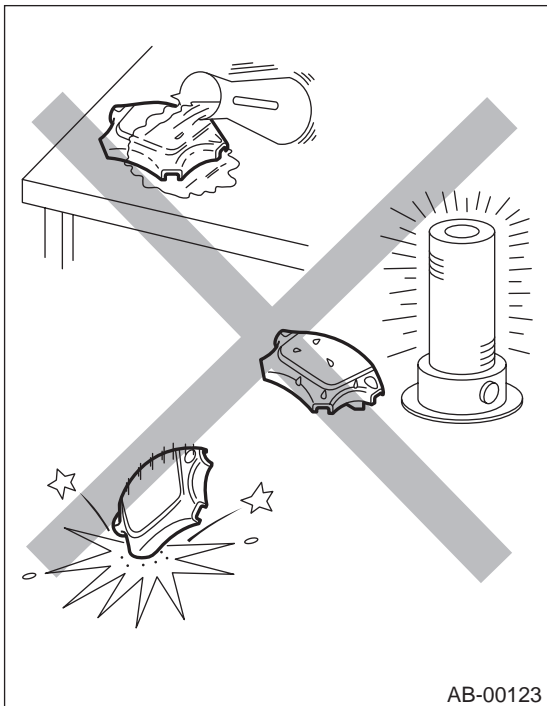


- If any damage, opening or rust is found on the airbag system wire harness, do not attempt to repair using soldering equipment. Be sure to replace the faulty harness with a new genuine part.

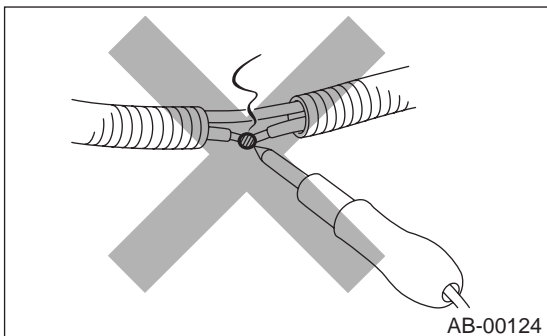


- Install the wire harness securely with the specified clips to avoid interference or tangled up with other parts.

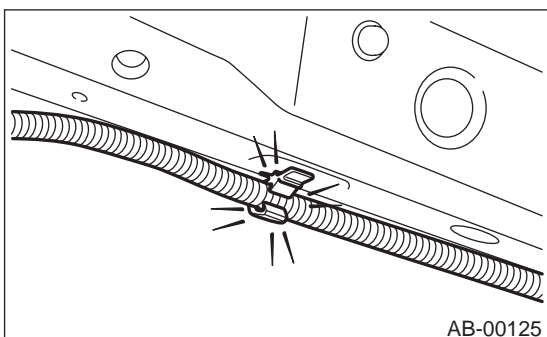


- Do not allow water or oil to come in contact with the connector terminals. Do not touch the connector terminals.

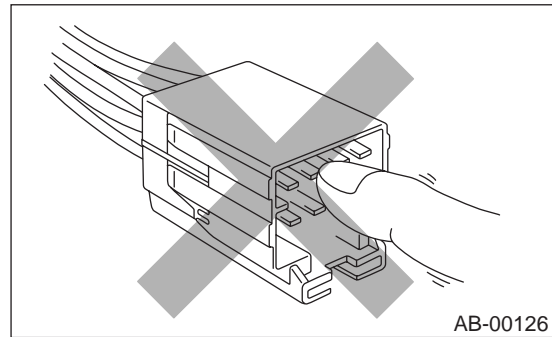

- The airbag module (driver, passenger, and side, pretensioner) must not be disassembled.
- The airbag module cannot be used again once inflated.

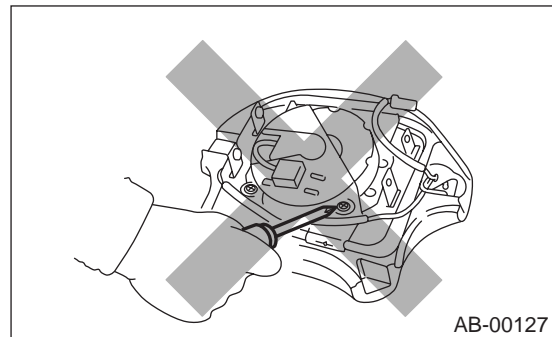


- After removal, keep the airbag module with the pad facing upward on a dry, clean, and flat surface away from heat and light sources, and moisture and dust.

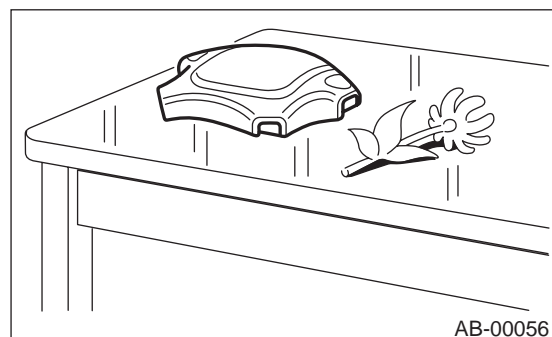


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

- Do not check continuity of the airbag module (driver, passenger, and side, pretensioner).

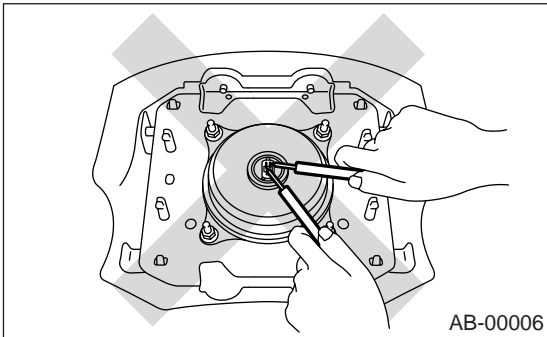


- The removed front seat with the airbag module must be kept at least 200 mm (8 in) away from walls and other objects.

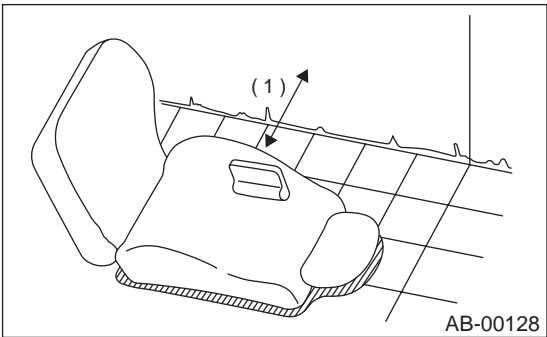

(1) More than 200 mm (8 in)

- When painting or performing sheet metal work on the front part of the vehicle, including the front wheel apron, front fender, and front side frame, remove the front sub sensors and wire harness of the airbag system.
- When painting or performing sheet metal work on the side of the vehicle, including the side sill, center pillar, and front and rear doors, remove the side airbag sensors and wire harness of the airbag system.







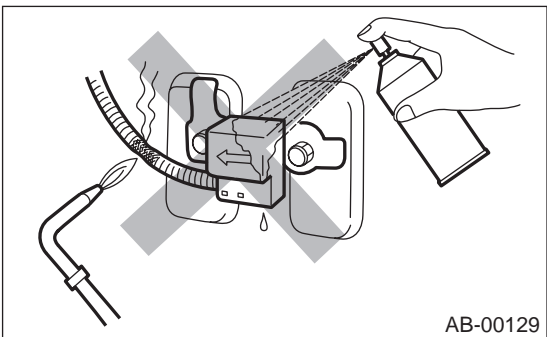


GENERAL DESCRIPTION






AIRBAG SYSTEM (DIAGNOSTICS)

- When storing a removed airbag module, do not place any objects on it or pile airbag modules on top of each other. If the airbag inflates for some reason when it is placed with its pad side facing downward or under any object, a serious accident may result.

   (1)

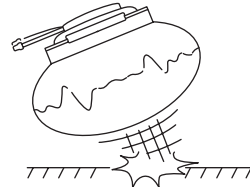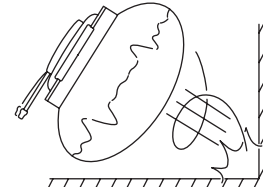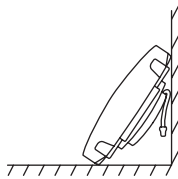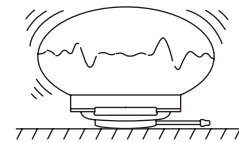

(2)

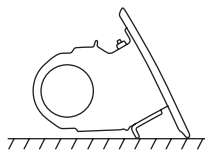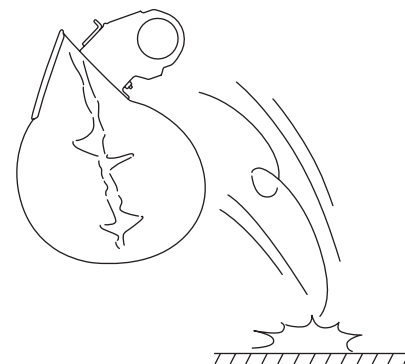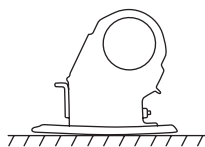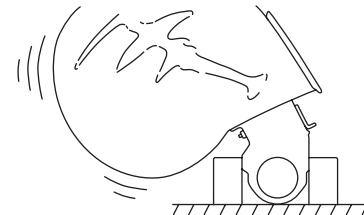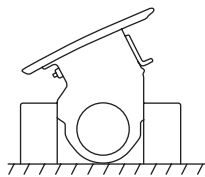

AB-00130

(1) Driver side

(2) Passenger side

- Do not discard undeployed airbag modules. They could easily cause a serious accident if accidentally deployed.
- Do not damage the airbag module or drop it.

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

B: INSPECTION

Before diagnosing, check the following items that might be related to the engine problem:

1. BATTERY

Measure battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V

Specific gravity: Above 1.260

GENERAL DESCRIPTION


AIRBAG SYSTEM (DIAGNOSTICS)

C: PREPARATION TOOL

CAUTION:

Be sure to use specified test harness F, G, H, K and I or I2 when measuring voltage, resistance, etc. of AIRBAG system component parts.


1. TEST HARNESS F

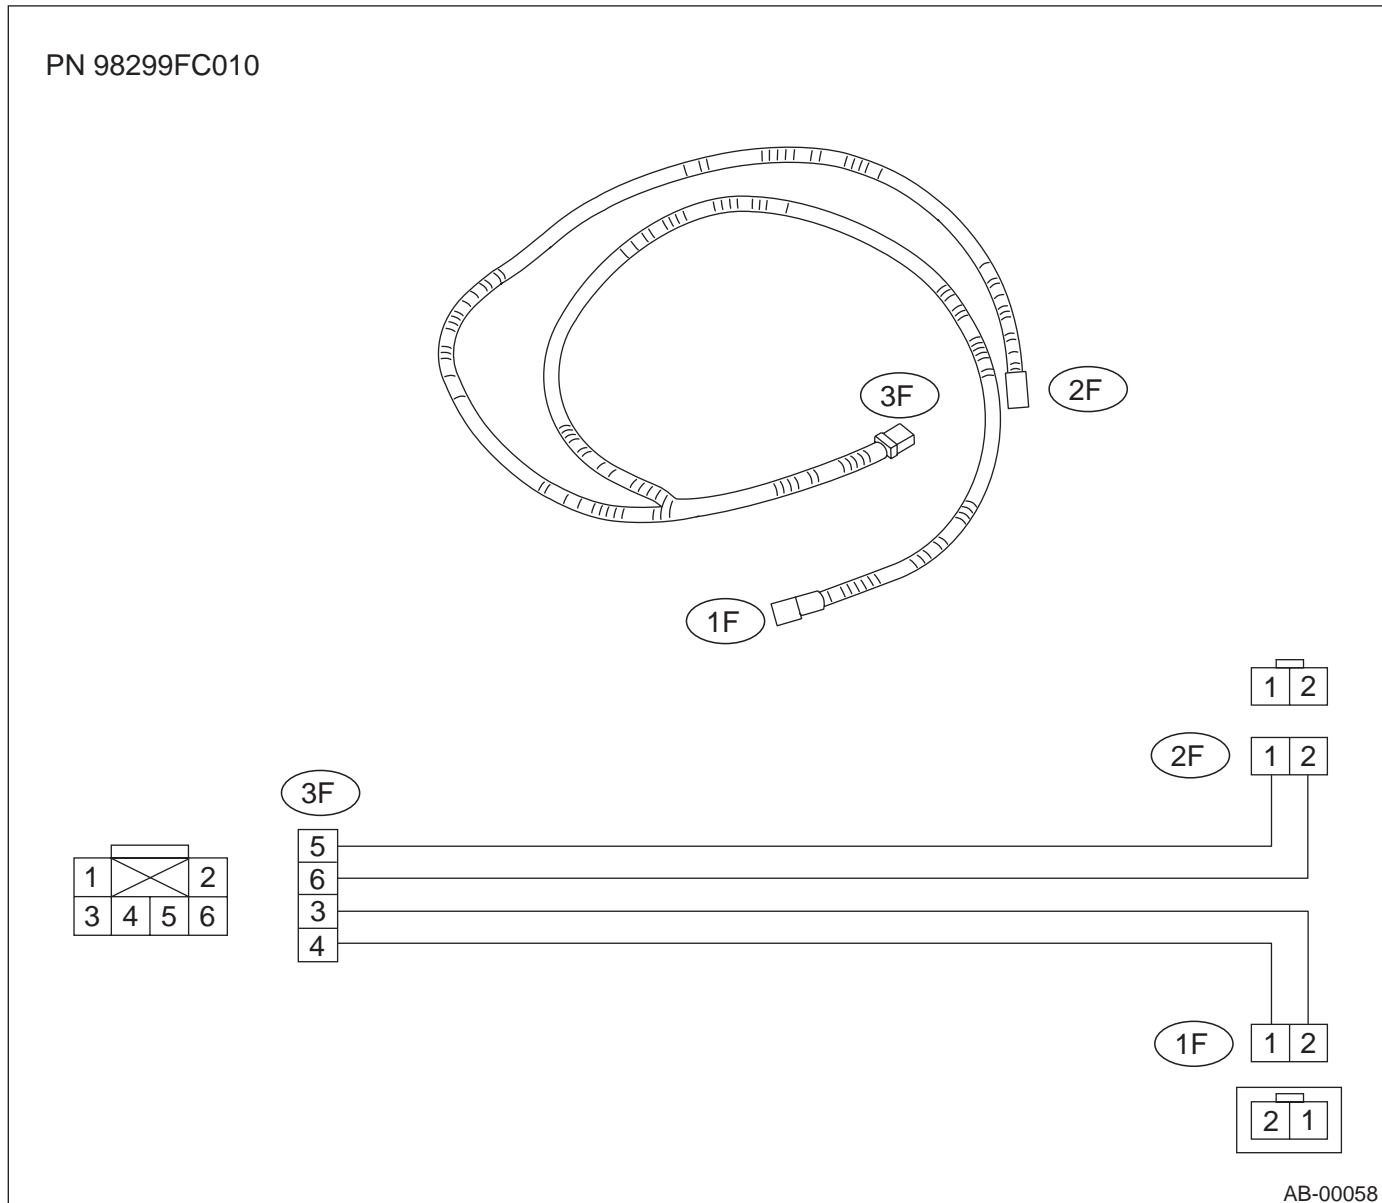

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)


2. TEST HARNESS G

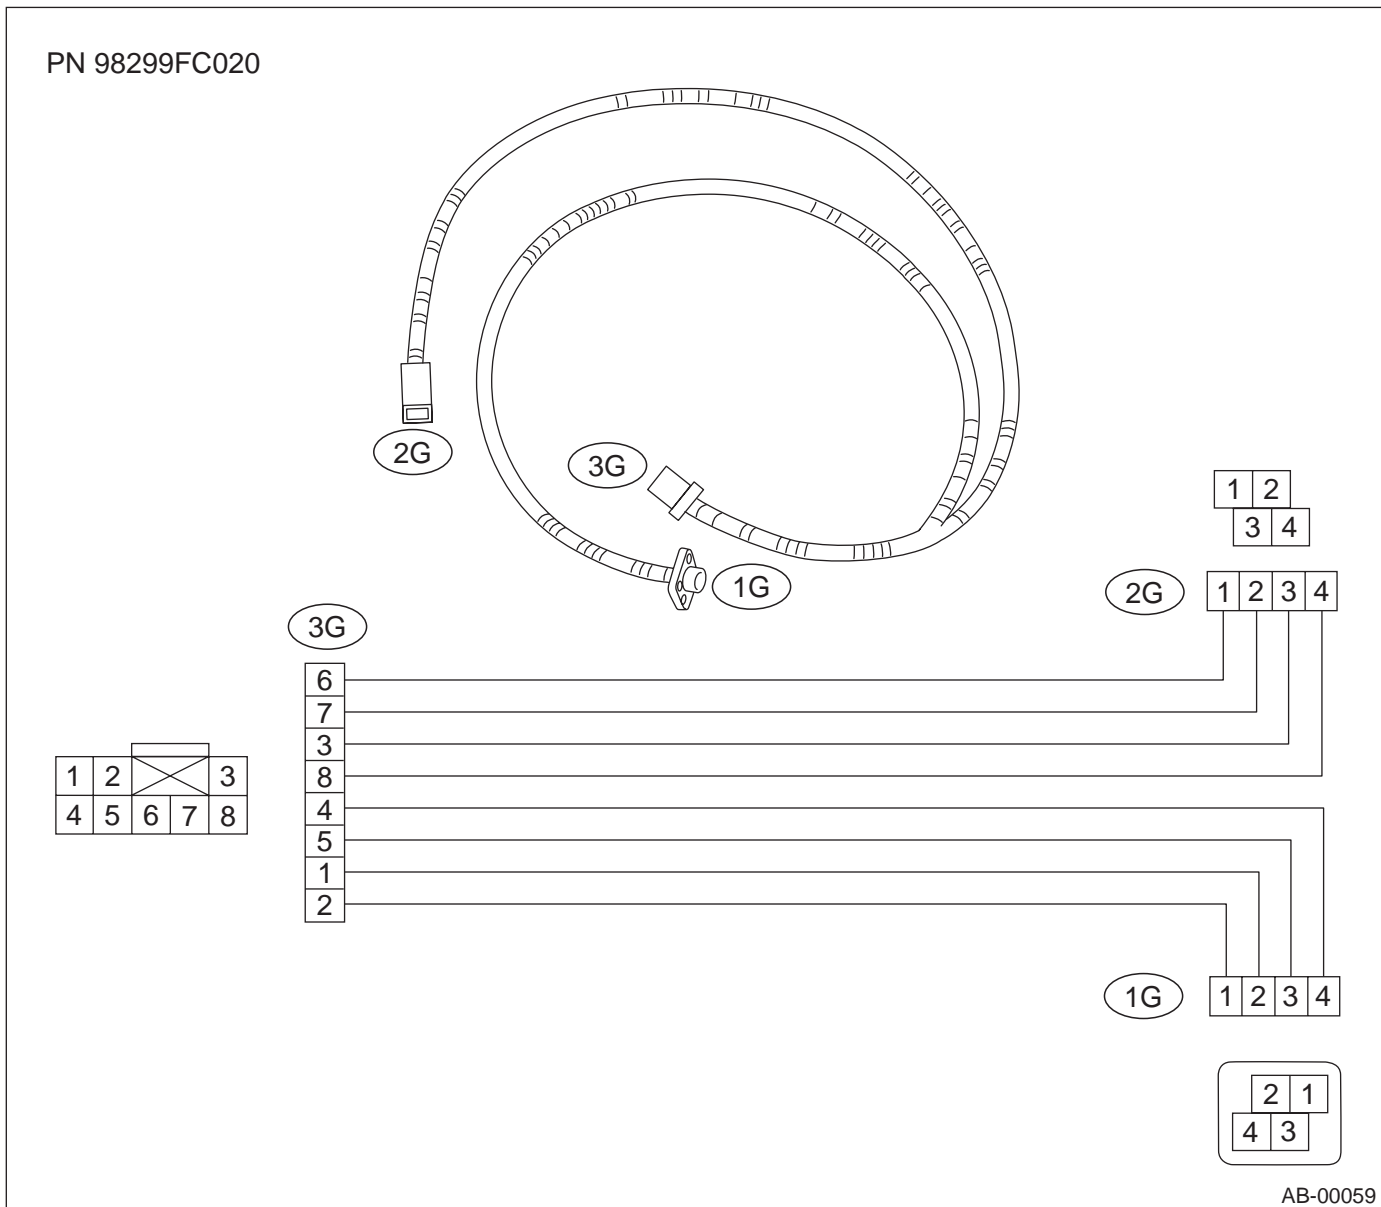

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)


3. TEST HARNESS H

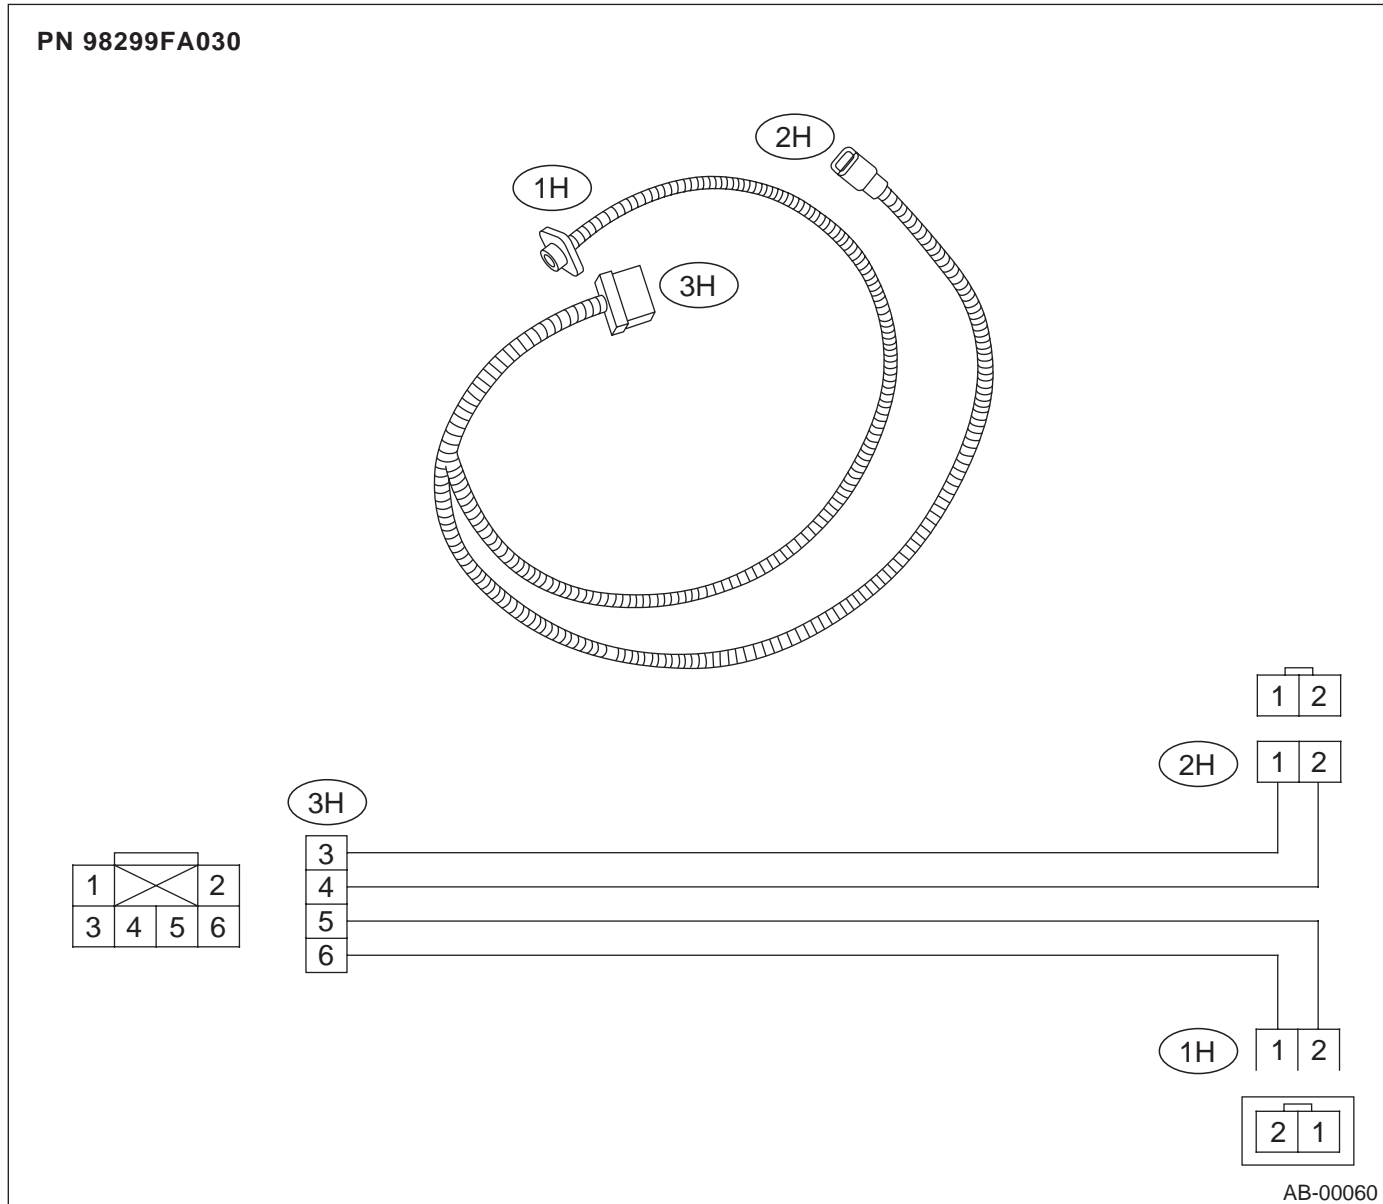

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

4. TEST HARNESS I2

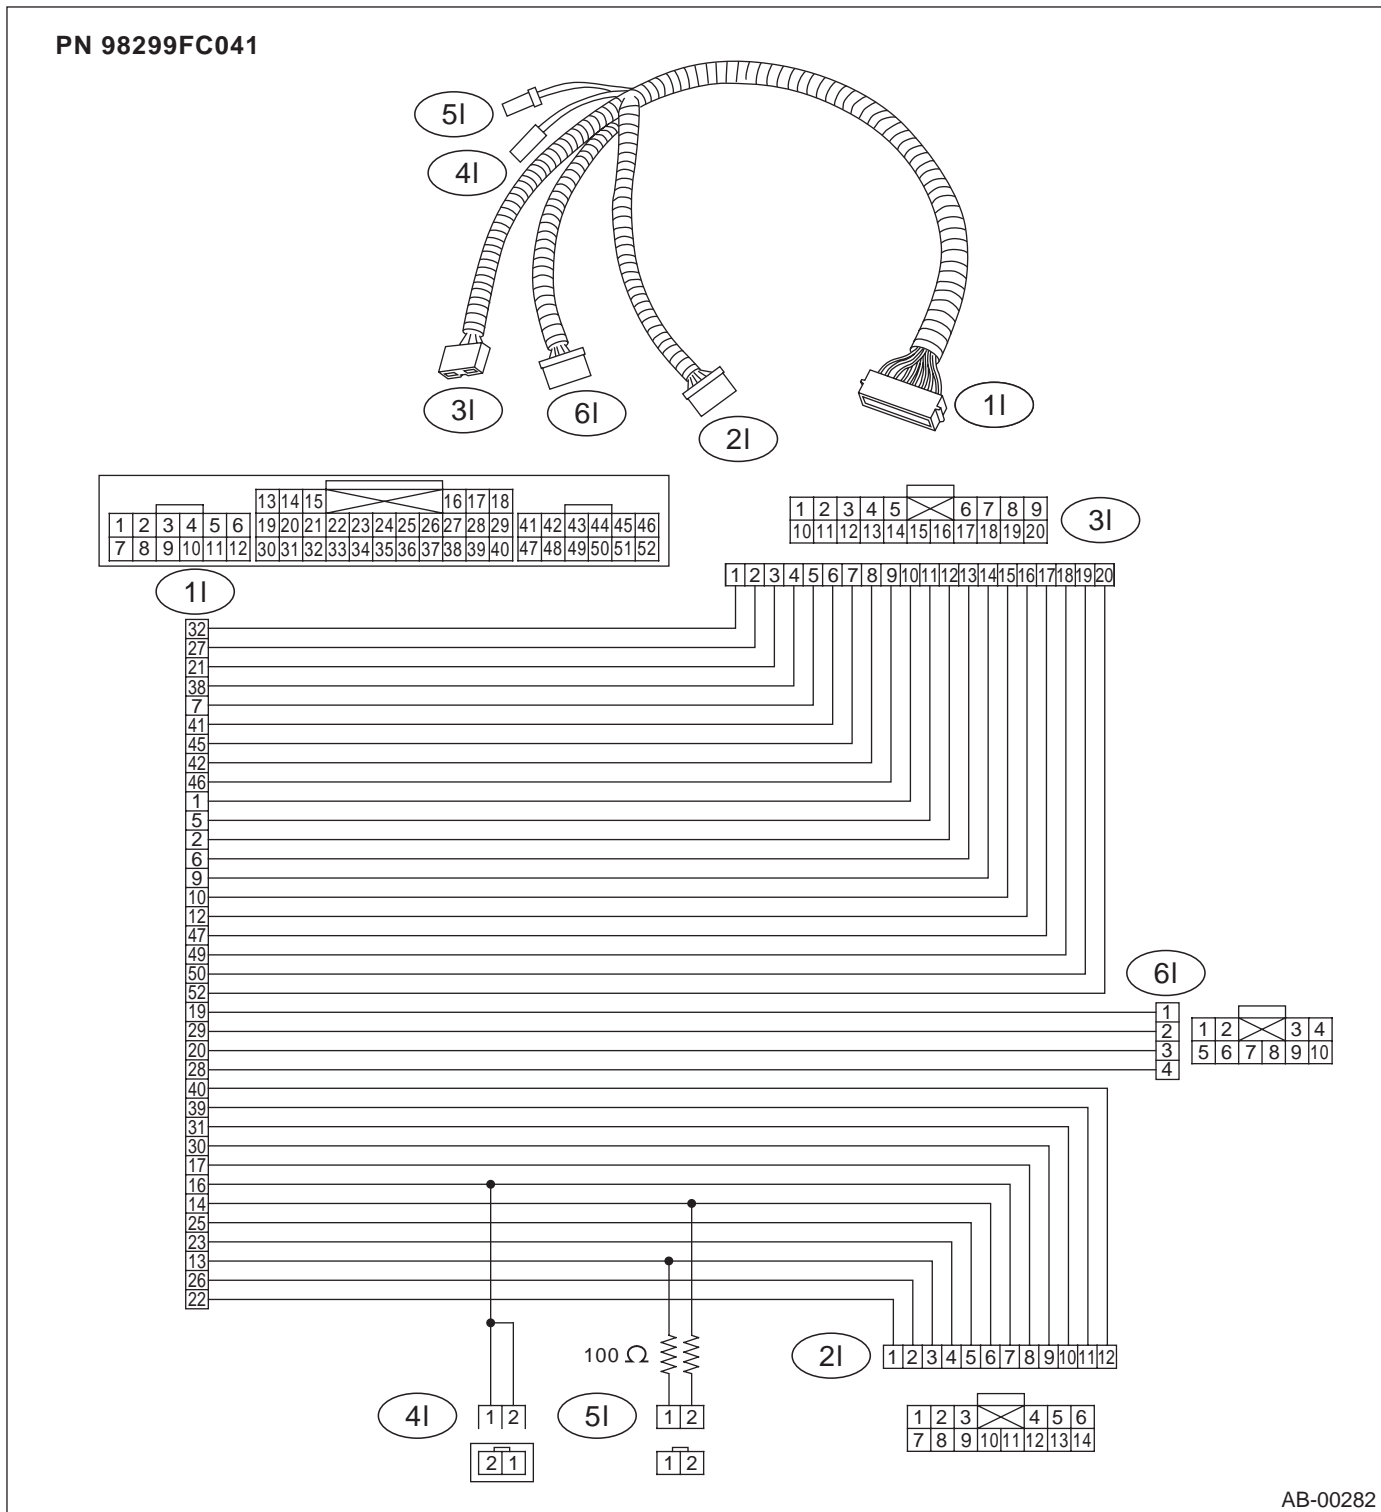


GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

5. AIRBAG RESISTOR

The airbag resistor is used during diagnostics. The airbag resistor has the same resistance as the airbag module and thus provides safety when used instead of the airbag module. It also makes it possible to finish, diagnostics in less time.

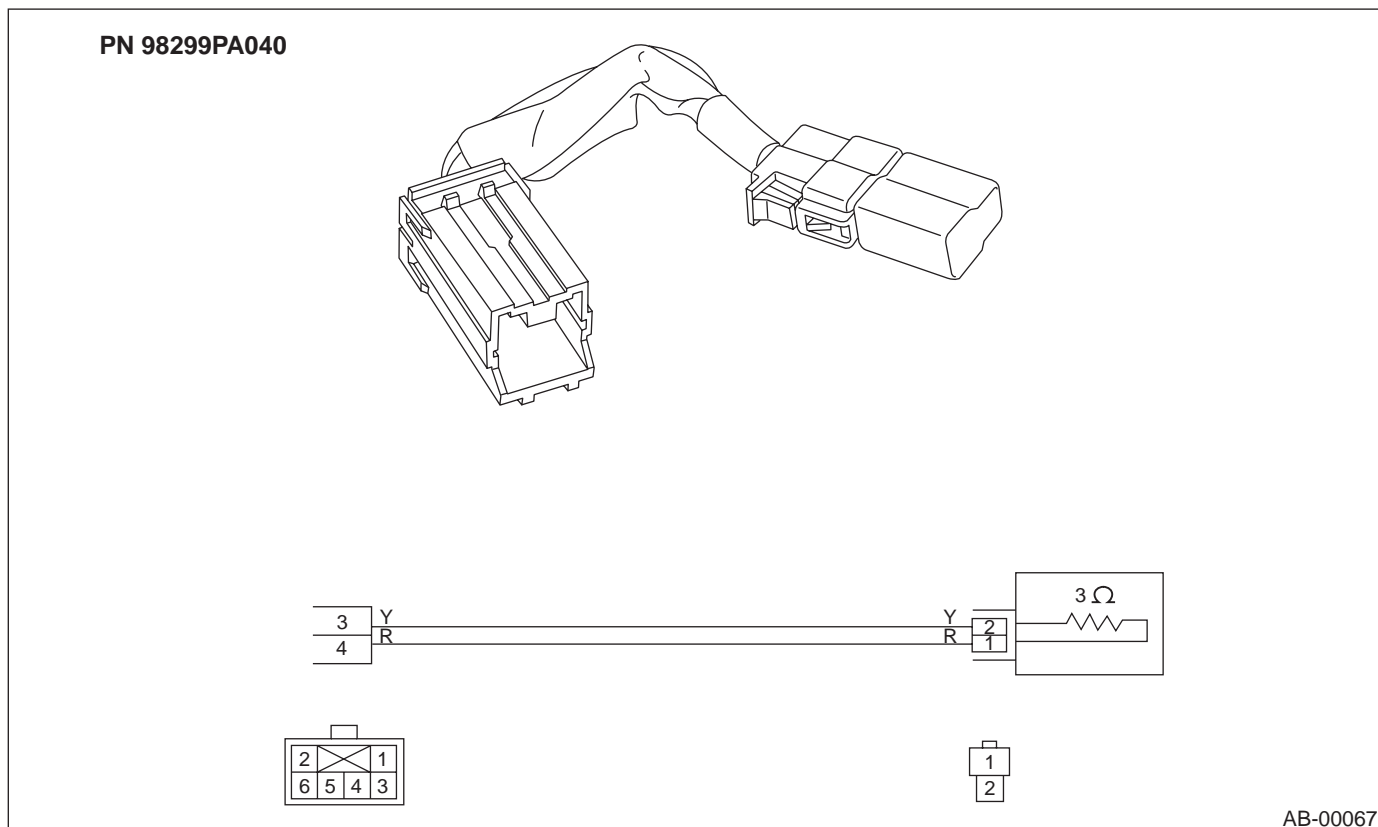

GENERAL DESCRIPTION

AIRBAG SYSTEM (DIAGNOSTICS)

6. TEST HARNESS K

