


ELECTRICAL COMPONENTS LOCATION

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Components Location

A: LOCATION

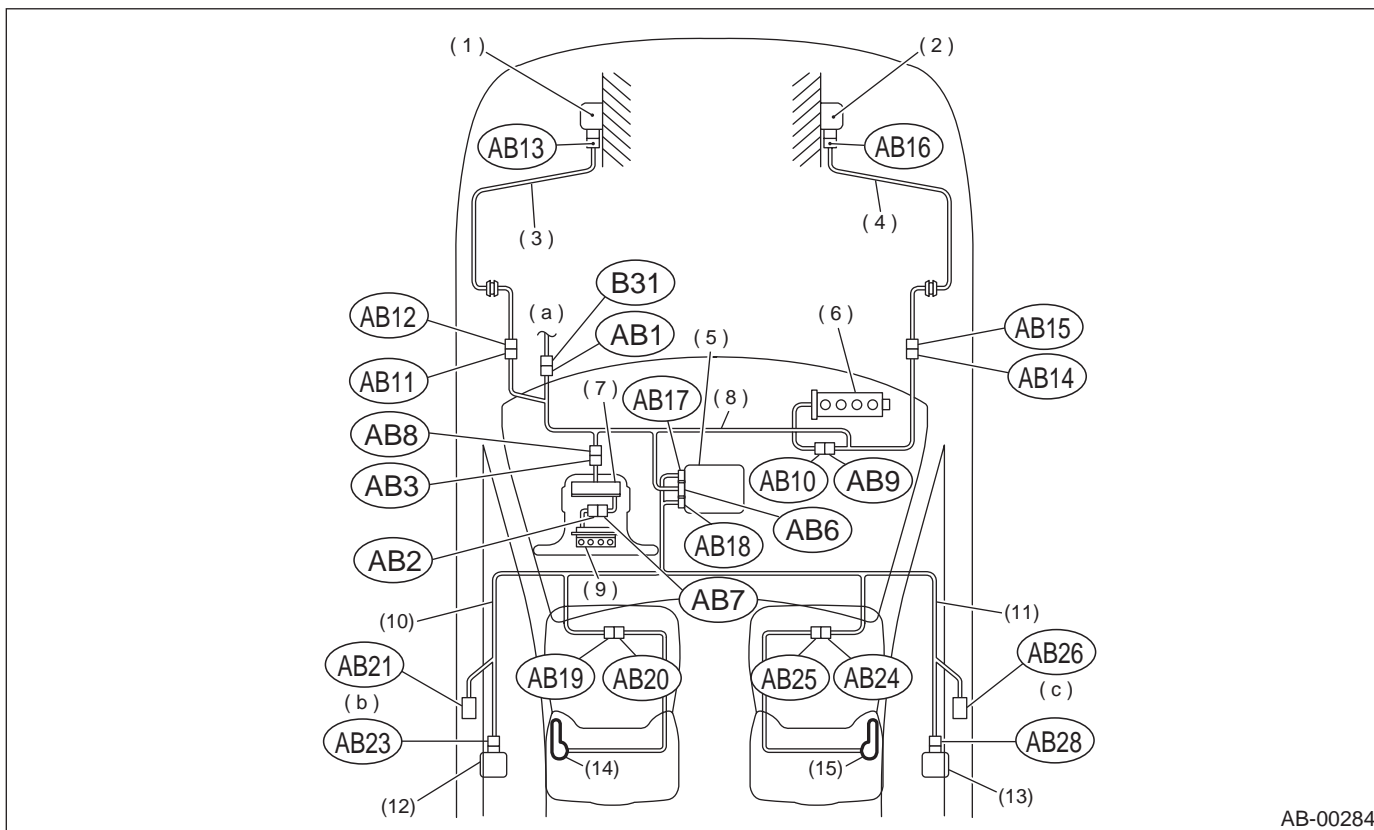

- | | | |
|--|-------------------------------|------------------------------------|
| (1) Front sub sensor (LH) | (7) Roll connector | (13) Side airbag sensor (RH) |
| (2) Front sub sensor (RH) | (8) Airbag main harness | (14) Side airbag inflator (LH) |
| (3) Front sub sensor harness (LH) | (9) Inflator (Driver) | (15) Side airbag inflator (RH) |
| (4) Front sub sensor harness (RH) | (10) Side airbag harness (LH) | (a) To body harness |
| (5) Airbag control module with safety sensor and electric sensor | (11) Side airbag harness (RH) | (b) To seat belt pretensioner (LH) |
| (6) Inflator (Passenger) | (12) Side airbag sensor (LH) | (c) To seat belt pretensioner (RH) |

Conne- tor No.	(AB1)	(AB2)	(AB3)	(AB6)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pole	12	2	2	28	2	2	4	4	2	2	2	2
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Blue	Blue	Yellow	Blue
Male/ Female	Male	Male	Male	Female	Female	Female	Female	Male	Male	Female	Female	Male
Conne- tor No.	(AB15)	(AB16)	(AB17)	(AB18)	(AB19)	(AB20)	(AB21)	(AB23)	(AB24)	(AB25)	(AB26)	(AB28)
Pole	2	2	12	12	2	2	2	4	2	2	2	4
Color	Blue	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/ Female	Female	Female	Female	Female	Female	Male	Female	Female	Female	Male	Female	Female

AB-15