


READ DIAGNOSTIC TROUBLE CODE (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- 1) Turn the ignition switch ON.
- 2) Connect the diagnosis terminal to diagnosis connector terminal No. 2 in the driver's seat lower cover area.

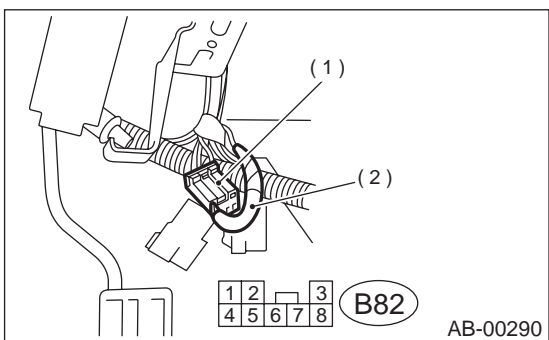

- (1) Diagnosis connector
- (2) Diagnosis terminal


- 3) Read DTC by identifying the way the air bag warning light flashes.

The airbag warning light flashes a DTC corresponding to the faulty parts.

The long segment (1.2 sec on) indicates a "ten", and the short segment (0.3 sec on) indicates a "one".

NOTE:

- "List of Diagnostic Trouble Code (DTC)" <Ref. to AB-28, List of Diagnostic Trouble Code (DTC).>
- "Airbag Warning Light Failure" <Ref. to AB-24, Airbag Warning Light Failure.>

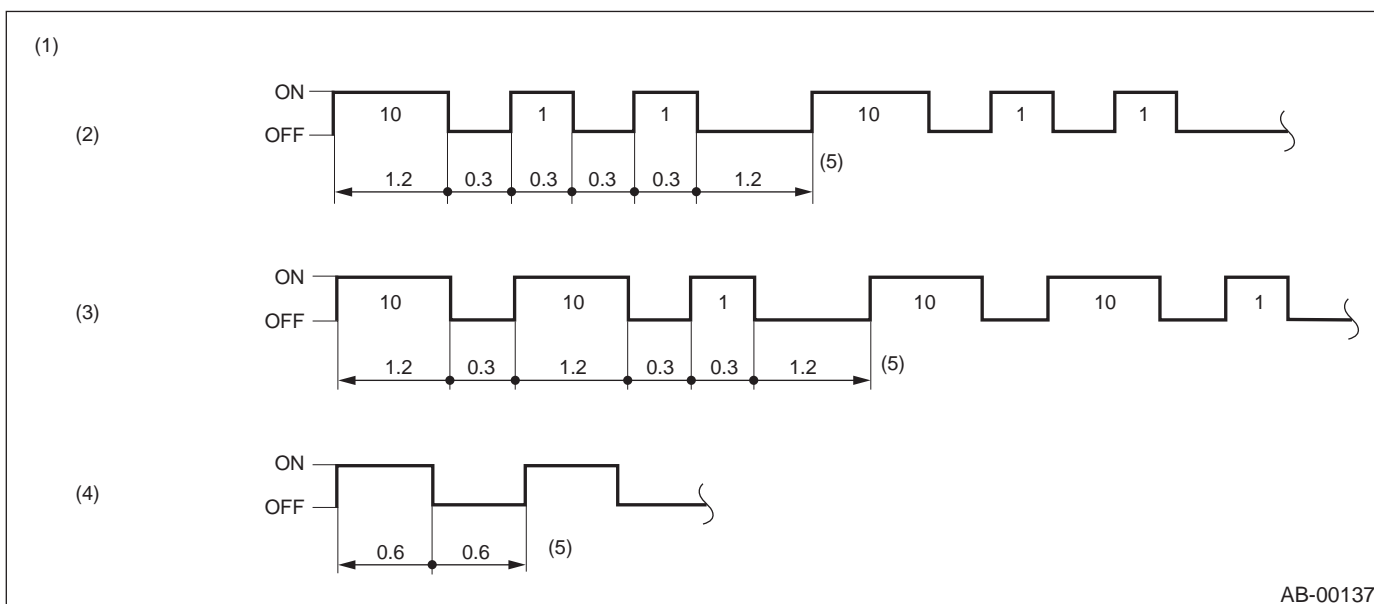

- (1) Example
- (2) Flashing code 12
- (3) Flashing code 21
- (4) Flashing normal code
- (5) Sec.

- 4) Turn the ignition switch OFF, and disconnect the diagnosis terminal from the diagnosis connector terminal No. 2.

- 5) Wind tape around the diagnosis terminal and return it to its original position.