


## 4. Driver's Airbag Module

### A: REMOVAL


#### CAUTION:

Refer to "CAUTION" in General Description before handling the airbag module. <Ref. to AB-3, CAUTION, GENERAL DESCRIPTION.>

- 1) Position front wheels straight ahead. (After moving a vehicle more than 5 m (16 ft) with front wheels positioned straight ahead, make sure that the vehicle moves straight ahead).
- 2) Turn ignition switch OFF.
- 3) Disconnect the ground cable from the battery, and wait for at least 20 seconds before starting work.
- 4) Using TORX® BIT T30, remove two TORX® bolts on side of steering wheel.

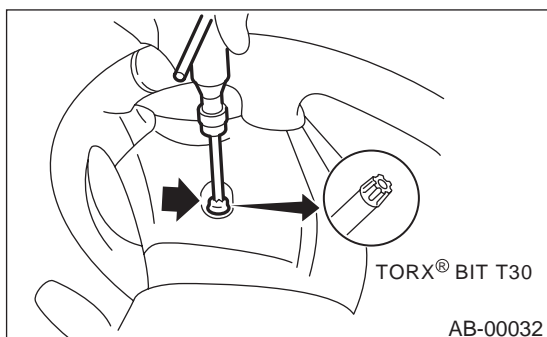

- 5) Disconnect airbag connector on back of airbag module, and then remove airbag module.

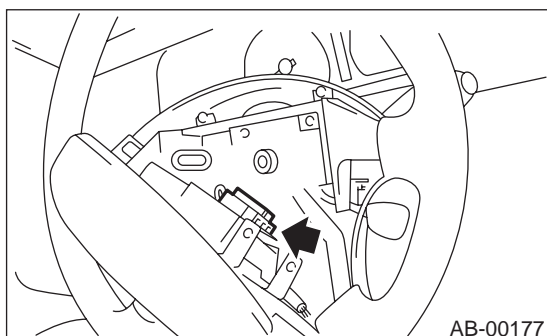

- 6) Refer to "CAUTION" for handling of a removed airbag module. <Ref. to AB-3, CAUTION, GENERAL DESCRIPTION.>

### B: INSTALLATION

- 1) Install in the reverse order of removal.

#### CAUTION:

Do not allow harness and connectors to interfere or get tangled up with other parts.

### C: INSPECTION

#### CAUTION:

Refer to "CAUTION" in General Description before handling the airbag module. <Ref. to AB-3, CAUTION, GENERAL DESCRIPTION.>

Check for the following, and replace damaged parts with new parts.

- Airbag module, harness, connector, and mounting bracket are damaged.