

SIDE AIRBAG MODULE

AIRBAG SYSTEM

6. Side Airbag Module

A: REMOVAL

CAUTION:

- Refer to “CAUTION” in General Description before handling the airbag module. <Ref. to AB-3, CAUTION, GENERAL DESCRIPTION.>
- The side airbag module cannot be detached from the front seat assembly.
- When replacing side airbag module, replace front seat assembly.
<Ref. to SE-7, REMOVAL, Front Seat.>

B: INSTALLATION

<Ref. to SE-8, INSTALLATION, Front Seat.>

C: INSPECTION

CAUTION:

Refer to “CAUTION” in General Description before handling the airbag module. <Ref. to AB-3, CAUTION, GENERAL DESCRIPTION.>

Check for the following, and replace damaged parts with new parts.

- Front seat is deformed or damaged.
- Harness and/or connector is cracked, deformed or open.
- Lead wire is exposed.

AB-15