



10.Side Airbag Sensor

A: REMOVAL

- 1) Turn ignition switch OFF.
- 2) Disconnect the ground cable from the battery, and wait for at least 20 seconds before starting work.
- 3) Remove center pillar lower trim. <Ref. to EI-42, REMOVAL, Lower Inner Trim.>
- 4) Remove Outer Belt (FRONT). <Ref. to SB-7, REMOVAL, Front Seat Belt.>
- 5) Remove bracket (A), and then remove cap (B).

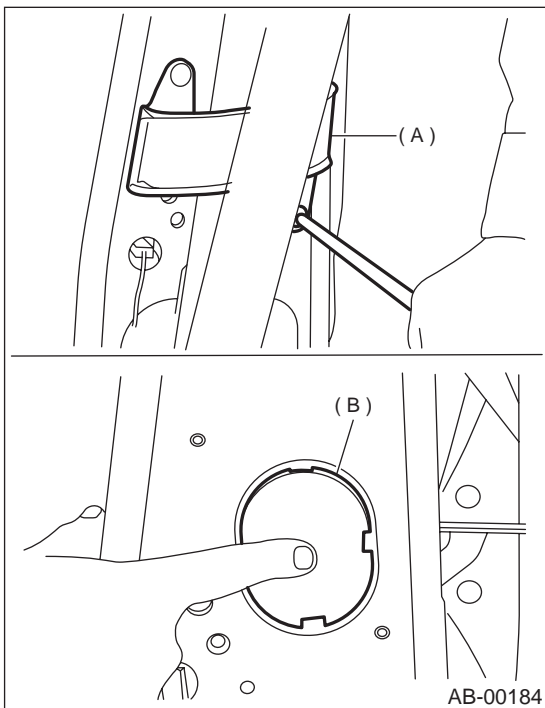

- 6) Remove two mounting nuts, and then detach side airbag sensor (A).

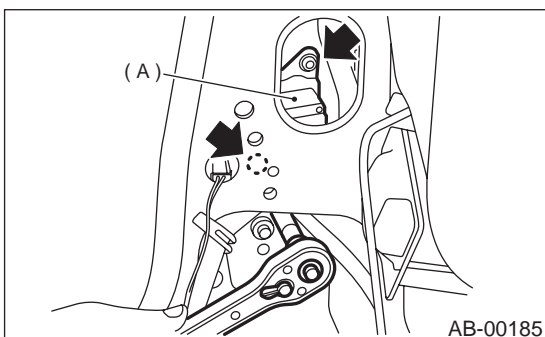

B: INSTALLATION

CAUTION:

Use new mounting nuts during re-assembly.
Install in the reverse order of removal.

C: INSPECTION

Check for the following, and replace damaged parts with new parts.

- Bracket connector for side airbag sensor is damaged.