


CRUISE CONTROL MODULE

CRUISE CONTROL SYSTEM

3. Cruise Control Module

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 3) Remove nut, then remove cruise control module (A) and the other electrical control module (B) while disconnecting connector.

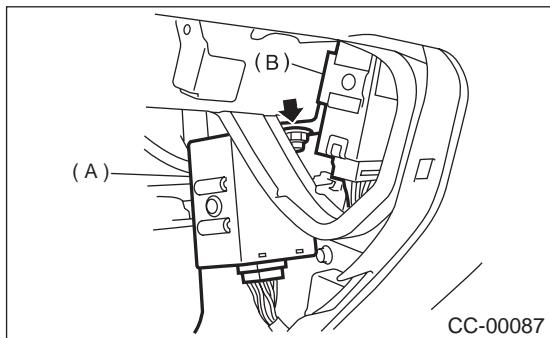

- 4) Disconnect cruise control module and the other electrical control module.

B: INSTALLATION

Install is in the reverse order of removal.