

STOP AND BRAKE SWITCH

CRUISE CONTROL SYSTEM

6. Stop and Brake Switch

A: REMOVAL


- 1) Disconnect ground cable from battery.
- 2) Disconnect connector from stop and brake switch, and then remove the switch. <Ref. to BR-42, REMOVAL, Stop Light Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the brake switch (A) and stop light switch (B) resistance.

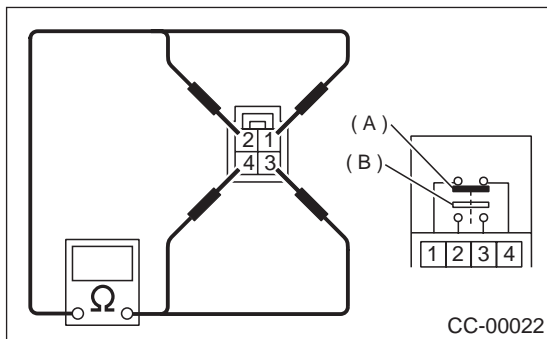

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1 Ω
	Depressed	1 and 4	More than 1 MΩ
Stop light	Released	2 and 3	More than 1 MΩ
	Depressed	2 and 3	Less than 1 Ω

If NG, replace stop and brake switch.

CC-8