

**CLUTCH SWITCH**

CRUISE CONTROL SYSTEM

**7. Clutch Switch****A: REMOVAL**


- 1) Disconnect ground cable from battery.
- 2) Disconnect the connector from the clutch switch, and then remove the switch. <Ref. to CL-21, REMOVAL, Clutch Pedal.>

**B: INSTALLATION**

Install in the reverse order of removal.

**C: INSPECTION**

Measure clutch switch resistance.

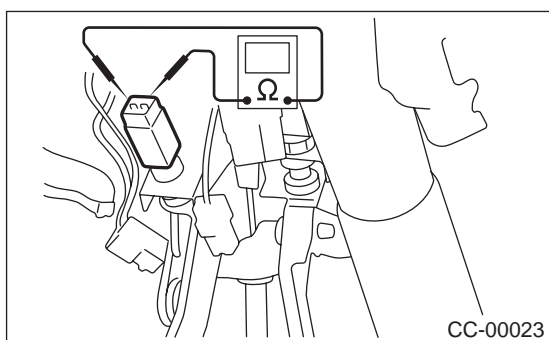

Switch	Pedal	Terminal No.	Standard
Clutch	Released	1 and 2	Less than 1 $\Omega$
	Depressed	1 and 2	More than 1 M $\Omega$

If NG, replace the clutch switch.

**CC-9**