


FRONT SPEAKER

ENTERTAINMENT

5. Front Speaker

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove front door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 3) Remove front speaker mounting screws.

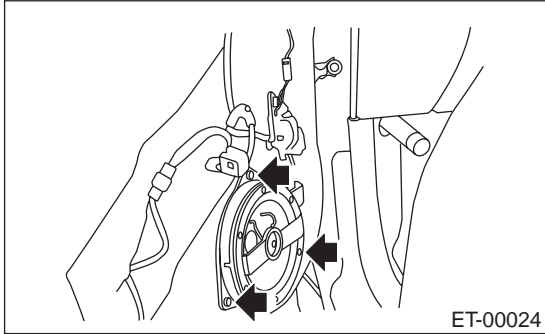

- 4) Disconnect harness connector and remove front speaker.

B: INSTALLATION

Install in the reverse order of removal.