


FRONT TWEETER

ENTERTAINMENT

6. Front Tweeter

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove gusset cover.

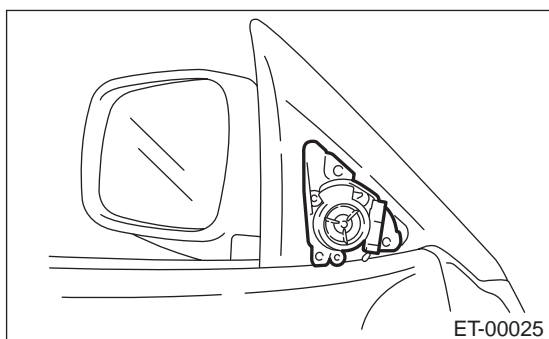

- 3) Disconnect harness connector and remove tweeter.

B: INSTALLATION

Install in the reverse order of removal.

ET-7