


## REAR DOOR PANEL

### EXTERIOR BODY PANELS


## 6. Rear Door Panel

### A: REMOVAL


- 1) Disconnect ground cable from battery.
- 2) Remove rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 3) Remove rear door regulator and motor assembly. <Ref. to GW-19, REMOVAL, Rear Regulator and Motor Assembly.>
- 4) Remove rear door latch. <Ref. to SL-36, REMOVAL, Rear Door Latch Assembly.>
- 5) Remove rear outer handle. <Ref. to SL-35, REMOVAL, Rear Outer Handle.>
- 6) Remove center pillar lower trim. <Ref. to EI-42, REMOVAL, Lower Inner Trim.>
- 7) Remove seatbelt bracket and blind plug. Disconnect connector of door harness and remove door hinge nut.

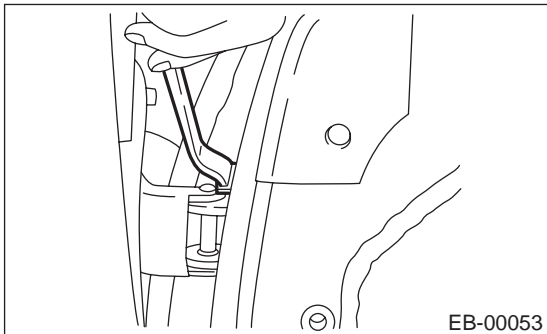

- 8) Put a wooden block on the jack and place the jack under the door. Support the door with the jack to protect it.
- 9) Remove checker bolts.

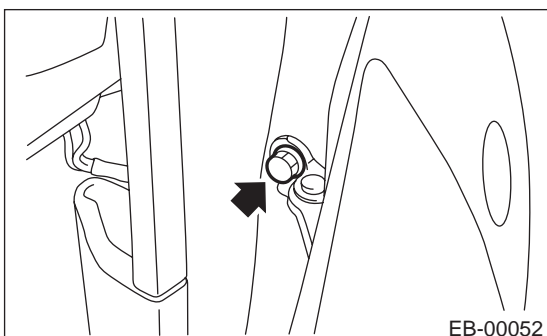

- 10) Remove door-side bolts for upper and lower hinges to remove door.

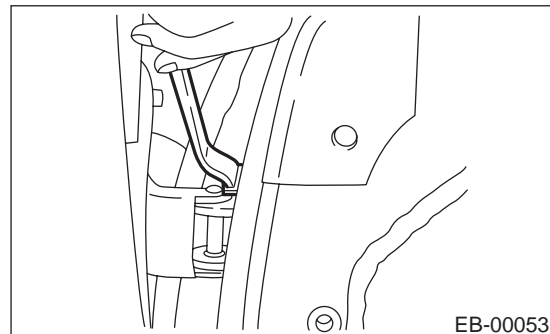

- 11) Using special tool, remove body-side bolts for upper and lower hinges, and remove door hinges. ST 925610000 WRENCH

### CAUTION:

- During removal and installation of doors, do not damage body.
- Doors are heavy. Be careful not to drop and damage them.

### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Apply grease to sliding area of door hinges.


### Tightening torque:

Refer to **COMPONENT** in *General Description*. <Ref. to EB-5, REAR DOOR PANEL, COMPONENT, General Description.>


### C: ADJUSTMENT

1) Using special tool, loosen body-side bolts of upper and lower hinges to align the position of rear door panel longitudinally and vertically.


ST 925610000 WRENCH

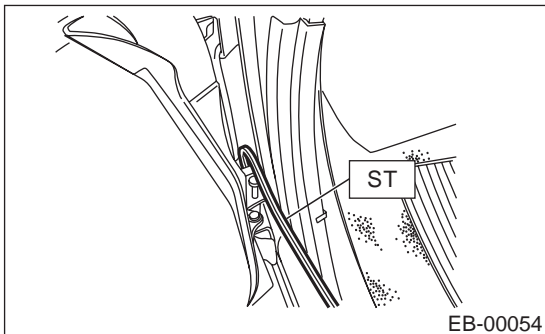

2) Loosen door-side bolts of upper and lower hinges to align the position of rear door panel vertically and laterally at front-end.

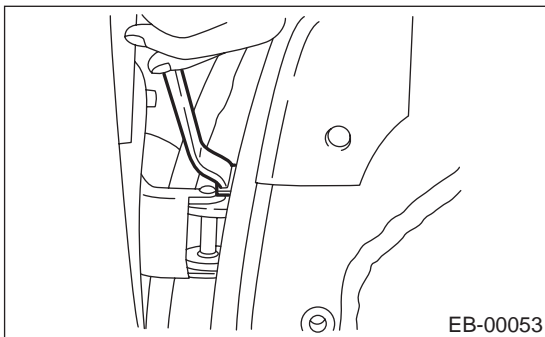

3) Loosen screw (A) and tap striker (B) using plastic hammer to adjust striker.

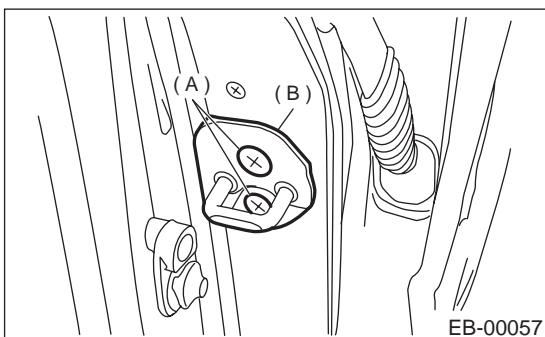

#### CAUTION:

Do not use an impact wrench. The welding area on the striker nut plate is easily broken.