

REAR SEALING COVER

EXTERIOR BODY PANELS


7. Rear Sealing Cover

A: REMOVAL

- 1) Remove rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove rear speaker. <Ref. to ET-8, REMOVAL, Rear Speaker.>

CAUTION:

- Carefully remove butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new one.

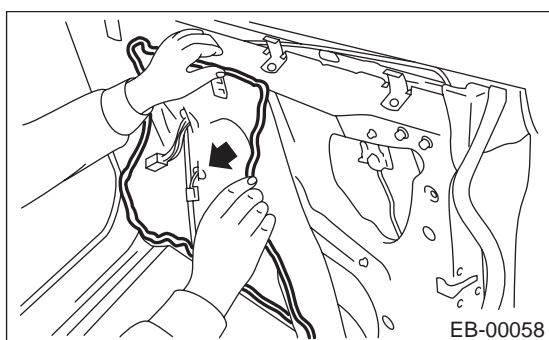

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) When replacing sealing cover, use butyl tape.
- 3) Press sealer-applied area firmly to prevent any floating on surface.

Butyl tape:

3M8626 or equivalent

CAUTION:

- Apply an uniform bead of butyl tape.
- Attach sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

C: INSPECTION

If sealing cover gets damaged, replace it with a new one.