

TRUNK LID PANEL


EXTERIOR BODY PANELS

8. Trunk Lid Panel

A: REMOVAL

1. TRUNK LID

- 1) Open trunk lid.
- 2) Disconnect trunk lid connector.
- 3) Loosen trunk lid mounting bolts to remove trunk lid from hinges.

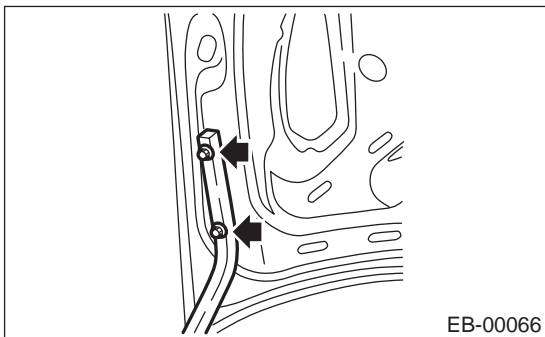


2. TORSION BAR

- 1) Open trunk lid.
- 2) Using special tool, remove torsion bar from hinge link.

ST 927780000 REMOVER

CAUTION:

During removal and installation, carefully handle torsion bar. It will generate reactive force.

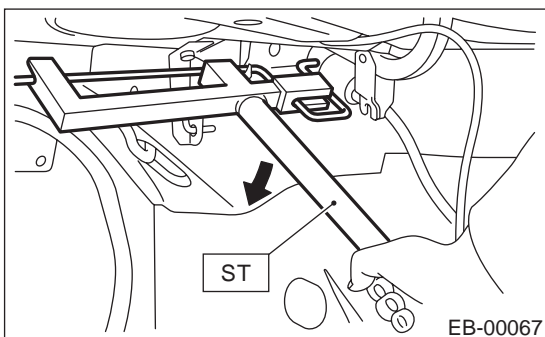

- 3) Remove right/left torsion bars.

CAUTION:

After the torsion bar is removed, the trunk lid will slam shut. Be careful not to get hit by the trunk lid.

B: INSTALLATION

1. TRUNK LID

- 1) Install in the reverse order of removal.
- 2) Install trunk lid with uniform clearance.

2. TORSION BAR

- 1) Install in the reverse order of removal.
- 2) Apply grease to rotating area of hinges and mating surface of torsion bar.

Tightening torque:

18 N·m (1.8 kgf·m, 13.0 ft·lb)