


## INNER REARVIEW MIRROR

GLASS/WINDOWS/MIRRORS


### 15.Inner Rearview Mirror

#### A: REMOVAL

1) Turn mirror base 90 degrees clockwise or counterclockwise to remove it.

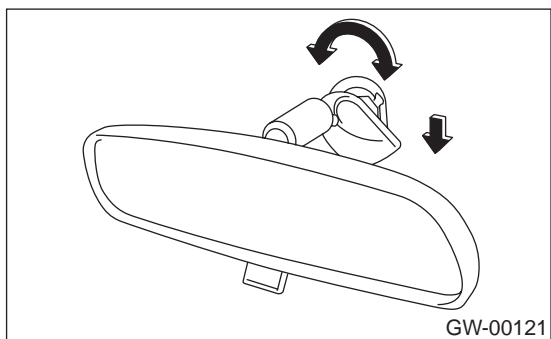

2) Remove spring from mirror base.

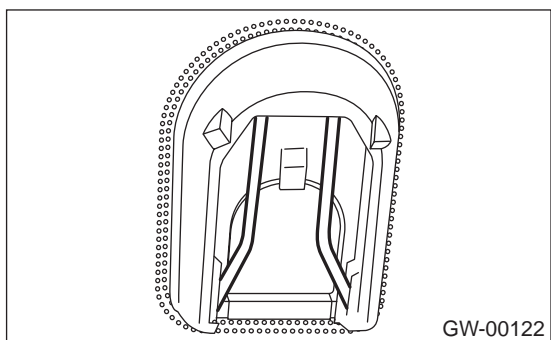

**CAUTION:**  
Be careful not to damage the mirror surface.

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

Do not let mirror be damaged.  
Do not let spring deteriorate.

GW-28