


OUTER MIRROR ASSEMBLY

GLASS/WINDOWS/MIRRORS


19.Outer Mirror Assembly

A: REMOVAL

- 1) Remove door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Pull off sealing cover to disconnect mirror electrical connector.

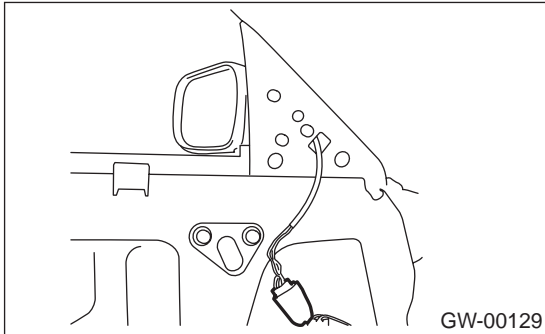

- 3) Loosen screws to remove mirror assembly.

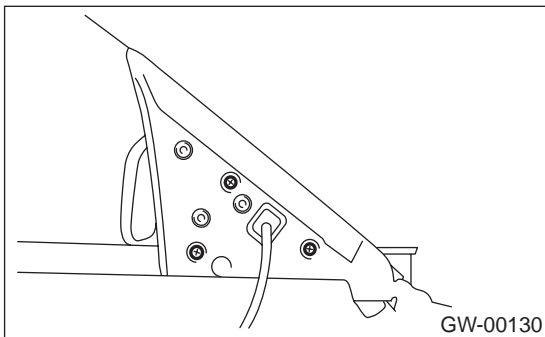

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check to ensure that rearview mirror moves properly when battery voltage is applied to terminals.

Switch position	Terminal No.
OFF	—
UP	1 (+) and 3 (-)
DOWN	3 (+) and 1 (-)
LEFT	2 (+) and 3 (-)
RIGHT	3 (+) and 2 (-)

If NG, replace the mirror.