

LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

7. List of Diagnostic Trouble Code (DTC)

A: LIST

1. DTC FOR SENSOR AND POTENTIOMETER

DTC	Trouble Unit	Contents
20	No Trouble	—
21	Ambient sensor	Open
-21		Short
22	In-vehicle sensor	Open
-22		Short
24	Evaporator sensor	Open
-24		Short
25	Sunload sensor	Open
-25		Short
26	Air mix door motor	Open
-26		Short

2. DTC FOR MODE DOOR POSITION SWITCH

DTC	30	31	32	33	34	35
Faulty Door	No Trouble	VENT	B/L	HEAT	D/H	DEF

LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

MEMO: