


HEATER CORE

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10.Heater Core

A: REMOVAL

- 1) Remove heater unit. <Ref. to AC-25, REMOVAL, Heater Unit.>
- 2) Remove screws to separate heater unit case.
- 3) Remove heater core.

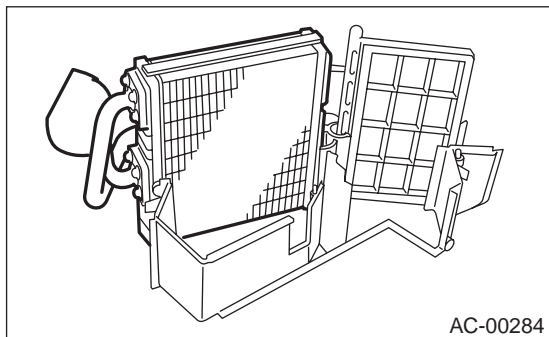

B: INSTALLATION

Install in the reverse order of removal.

AC-28