


RECEIVER DRIER

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

14. Receiver Drier

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Using refrigerant recovery system, discharge refrigerant. <Ref. to AC-18, OPERATION, Refrigerant Recovery Procedure.>
- 3) Disconnect pressure switch harness (A).
- 4) Disconnect pipe (B).
- 5) Loosen mounting bolts (C) to remove receiver drier.

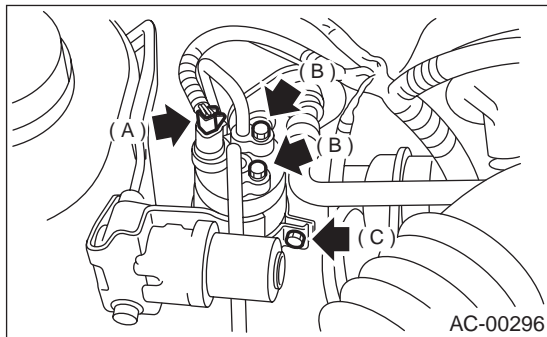

CAUTION:

The receiver drier contains a desiccant. After disconnecting receiver drier, plug it to avoid moisture.

If receiver drier is replaced, add appropriate amount of compressor oil to the compressor. <Ref. to AC-24, REPLACEMENT, Compressor Oil.>

B: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Replace O-rings with new ones, and apply compressor oil.

- 2) Charge refrigerant. <Ref. to AC-19, OPERATION, Refrigerant Charging Procedure.>

Tightening torque:

Refer to **COMPONENT** of *General Description*

<Ref. to AC-9, **AIR CONDITIONING UNIT, COMPONENT, General Description.**>