


## AMBIENT SENSOR (AUTO A/C)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 20.Ambient Sensor (Auto A/C)

#### A: REMOVAL

- 1) Open front hood.
- 2) Disconnect ground cable from battery.
- 3) Disconnect ambient sensor connector.
- 4) Remove ambient sensor from radiator lower panel.

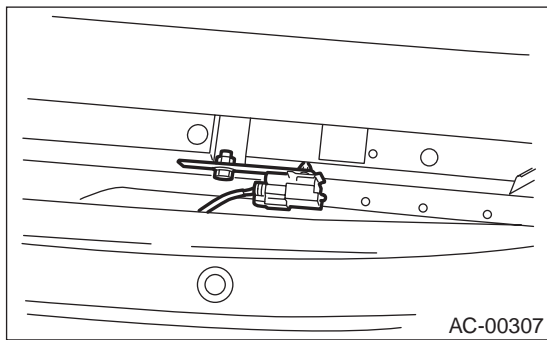

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

<Ref. to AC-24, DTC 21 OR -21 (AMBIENT SENSOR), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AC-41