

GENERAL DESCRIPTION

INSTRUMENTATION/DRIVER INFO

1. General Description

A: SPECIFICATIONS

Combination meter	Speedometer	Electric pulse type
	Temperature gauge	Cross coil type
	Fuel gauge	Cross coil type
	Tachometer	Electric pulse type
	Turn signal indicator light	12 V — 1.4 W
	Charge indicator light	12 V — 1.4 W
	Oil pressure indicator light	12 V — 1.4 W
	ABS warning light	12 V — 1.4 W
	CHECK ENGINE warning light (Malfunction indicator light)	12 V — 1.4 W
	HI-beam indicator light	12 V — 1.4 W
	Door open warning light	LED
	Seat belt warning light	LED
	Brake fluid and parking brake warning light	12 V — 1.4 W
	FWD indicator light	12 V — 1.4 W
	AIRBAG warning light	12 V — 1.4 W
	Meter illumination light	12 V — 3.4 W
	AT OIL TEMP. warning light	12 V — 1.4 W
	Security indicator light	LED
	VDC warning light	12 V — 1.4 W
	VDC function indicator light	12 V — 3 W
	VDC OFF indicator light	12 V — 1.4 W
	Low fuel warning light	12 V — 1.4 W
	Cargo light indicator light	LED
	Switch back gate indicator light	LED
	AT select lever position indicator light	12 V — 100 mA
	SPORT shift indicator	LED
LCD back light	12 V — 1.4 W	

GENERAL DESCRIPTION

INSTRUMENTATION/DRIVER INFO

B: CAUTION

- Be careful not to damage meters and instrument panel.
- Be careful not to damage meter glasses.
- Make sure that electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply excessive force to printed circuit.
- Do not drop or otherwise apply impact.

C: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.