


AMBIENT SENSOR

INSTRUMENTATION/DRIVER INFO

8. Ambient Sensor

A: REMOVAL

- 1) Open front hood.
- 2) Disconnect ground cable from battery.
- 3) Disconnect ambient sensor connector.
- 4) Remove ambient sensor from radiator lower panel.

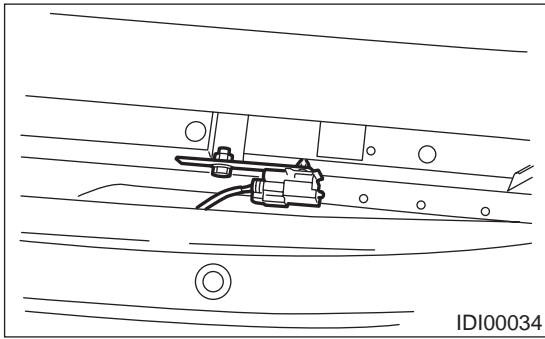


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure ambient sensor resistance.

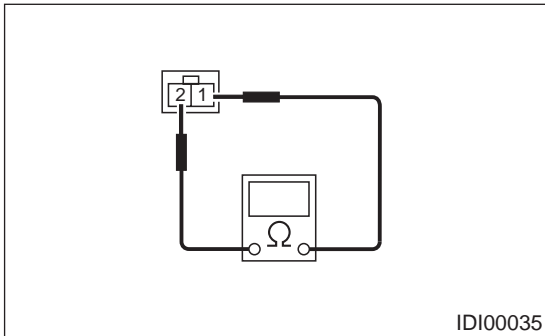

Terminal No.	Resistance
1 and 2	1.7 k Ω /25°C (77°F)

If NG, replace the ambient sensor.

IDI-18