

GENERAL DESCRIPTION

LIGHTING SYSTEM

1. General Description

A: SPECIFICATIONS

Headlight		12 V — 65 W/55 W (Except GT, OUTBACK) 12 V — 60 W/55 W (GT, OUTBACK)
Front turn signal light		12 V — 27 W (2 pieces)
Side marker light, parking light		12 V — 8 W
Front fog light		12 V — 55 W (Except OUTBACK) 12 V — 51 W (OUTBACK)
Rear combination light	Tail/Stop light	12 V — 8/27 W
	Turn signal light	12 V — 21 W
	Back-up light	12 V — 27 W
License plate light		12 V — 5 W
High-mounted stop light	Sedan	12 V — 16 W
	Wagon	12 V — 13 W (4 pieces)
Room light		12 V — 8 W
Spot light		12 V — 8 W
Door step light		12 V — 3.4 W
Luggage room light		12 V — 13 W
Trunk room light		12 V — 5 W
Glove box light		12 V — 1.4 W

GENERAL DESCRIPTION

LIGHTING SYSTEM

B: PRECAUTIONS

- Before disassembling or reassembling parts, always disconnect battery ground cable. When replacing radio, control module, and other parts provided with memory functions, record memory contents before disconnecting the battery ground cable. Otherwise, the memory will be erased.
- Reassemble in reverse order of disassembly, unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect connectors and hoses securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

WARNING:

- **Airbag system wiring harness is routed near electrical parts and switches. All airbag system wiring harnesses and connectors are yellow. Do not use electric test equipment on these circuits.**
- **Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.**

C: PREPARATION TOOL

1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.