


PARKING /SIDE MARKER LIGHT BULB

LIGHTING SYSTEM

12.Parking /Side Marker Light Bulb

A: REMOVAL

- 1) Remove headlight assembly. <Ref. to LI-11, REMOVAL, Headlight Assembly.>
- 2) Turn the socket and remove the bulb.

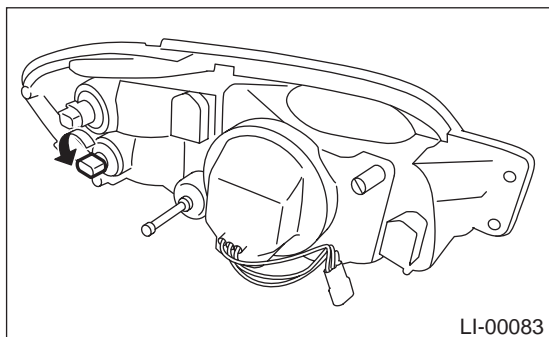

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.

LI-16