

## FRONT FOG LIGHT BULB


LIGHTING SYSTEM

### 14. Front Fog Light Bulb


#### A: REMOVAL

##### 1. EXCEPT OUTBACK

- 1) Disconnect ground cable from battery.
- 2) Remove the two clips and lower the mudguard.

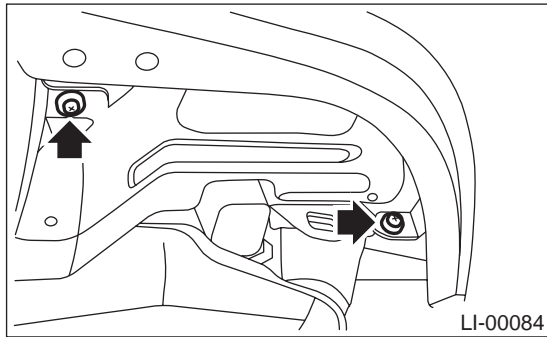

- 3) Disconnect harness connector.
- 4) Remove back cover (A).

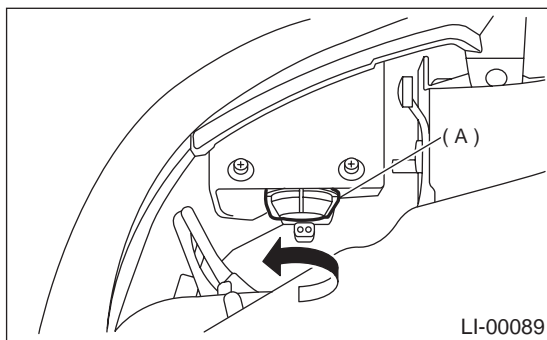

- 5) Remove spring retainer then detach fog light bulb.

##### 2. OUTBACK

- 1) Remove fog light assembly. <Ref. to LI-17, OUTBACK, REMOVAL, Front Fog Light Assembly.>
- 2) Disconnect harness connector.
- 3) Loosen screws and turn the bulb assembly counterclockwise, and then detach the bulb.

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-3, PRE-CAUTIONS, General Description.>
- 3) If NG, replace the bulb with a new one.