

REAR COMBINATION LIGHT ASSEMBLY


LIGHTING SYSTEM

15. Rear Combination Light Assembly


A: REMOVAL

1. SEDAN


- 1) Disconnect ground cable from battery.
- 2) Remove clips and then detach trunk rear trim.

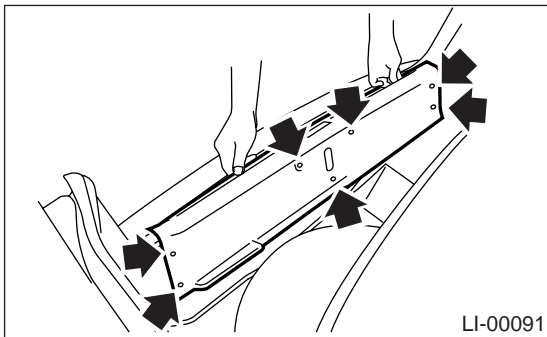

- 3) Remove hook (A) and then turn over the trunk side trim of rear portion.

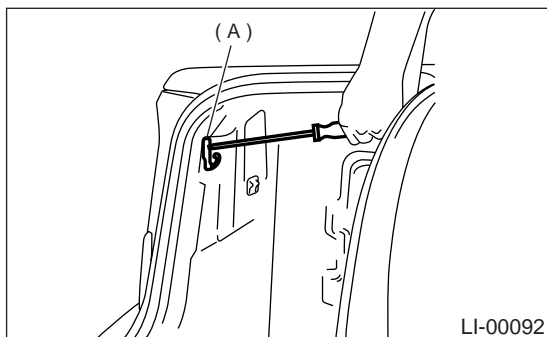

- 4) Remove harness clip (A).
- 5) Remove three nuts and then detach rear combination light while disconnecting connector.

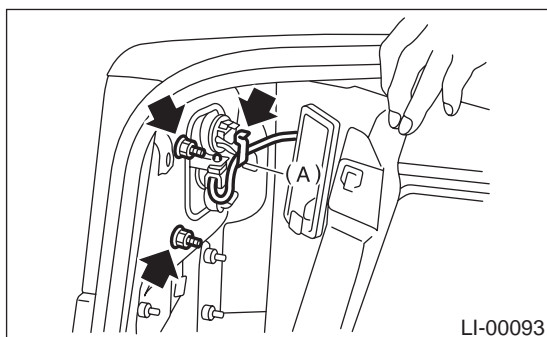


2. WAGON

- 1) Disconnect ground cable from battery.
- 2) Remove two rear quarter trim covers.
- 3) Remove two nuts and then remove rear combination light while disconnecting connector.

NOTE:

Before removing the nuts, apply a few turns of butyl tape to the tip of the service tool. This prevents the nuts from falling during removal.

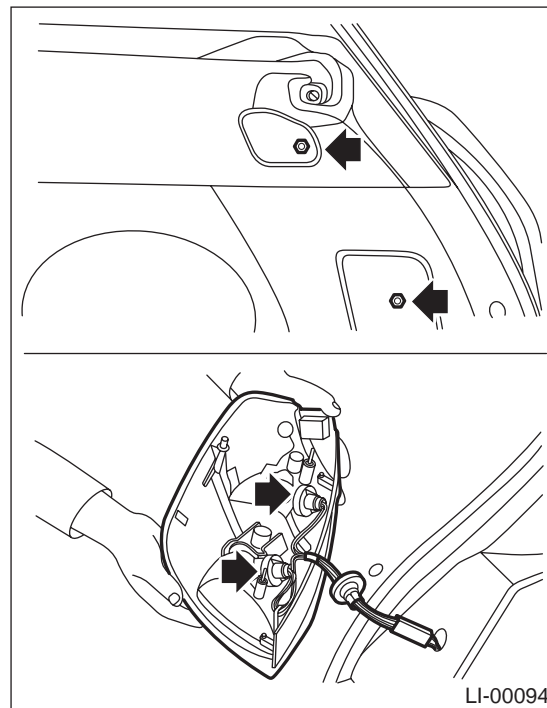

B: INSTALLATION

Install in the reverse order of removal.