


19. Rear Turn Signal Light Bulb

A: REMOVAL

1. SEDAN


- 1) Open trunk lid and remove cover.

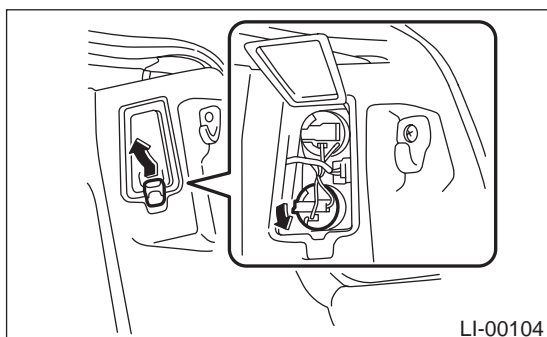

- 2) Turn the socket and remove the bulb.

2. WAGON

- 1) Remove rear combination light assembly. <Ref. to LI-19, WAGON, REMOVAL, Rear Combination Light Assembly.>
- 2) Remove the light cover mounting screws then detach the cover.
- 3) Turn the socket and remove the bulb.

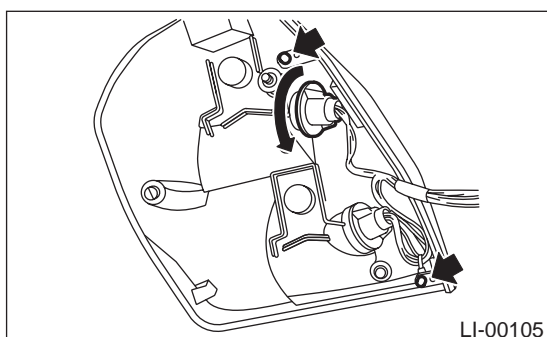

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.