

LICENSE PLATE LIGHT


LIGHTING SYSTEM

20. License Plate Light


A: REMOVAL

1) Remove license plate light mounting screw (A) and then remove the lens (B)

SEDAN

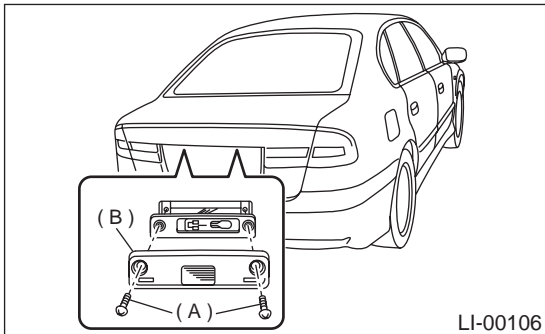

WAGON

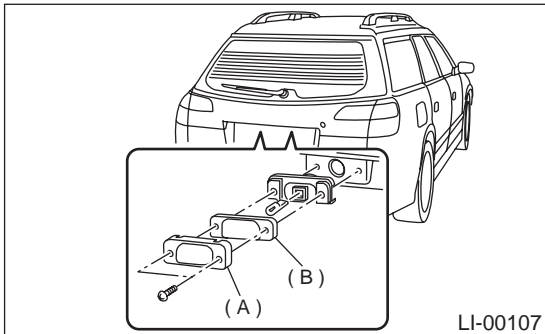

2) Remove the bulb.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.