

## SPOT LIGHT


### LIGHTING SYSTEM

---

## 22. Spot Light

### A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove lens (A) and spot light mounting screw (B).

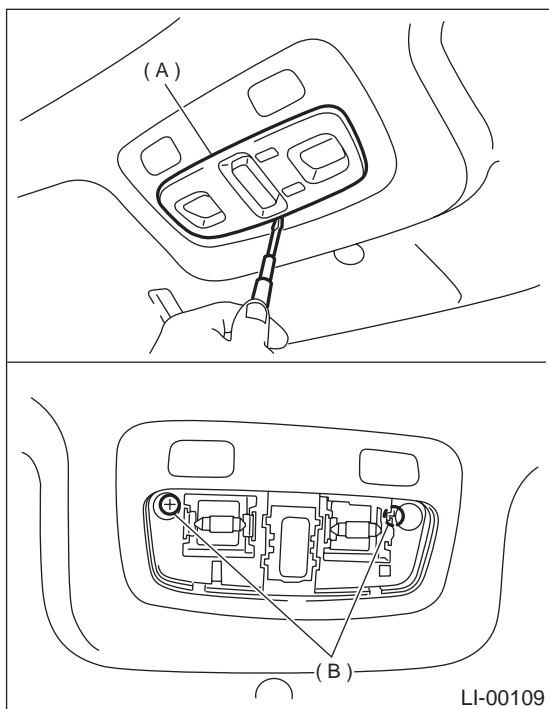

- 3) Disconnect harness connectors and remove spot light.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

#### 1. SPOT LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.

#### 2. SPOT LIGHT SWITCH

Measure spot light resistance.

Switch position	Terminal No.	Standard
OFF	—	More than 1 M $\Omega$
ON	1 and 2	18 $\pm$ 5.4 $\Omega$