

2. General Description

A: CAUTION

When the inspection procedure must be performed pressing each OnStar (R) button, call the OnStar (R) call center first.

When VIU and VCU are replaced, contact to the OnStar (R) call center to ask for set-up.

B: INSPECTION

Before performing diagnostics, check the following items which might affect OnStar (R) problems.

1. BATTERY

Measure the battery voltage and specific gravity of electrolyte.

Standard voltage: 12 V or more

Specific gravity: Above 1.260

2. AIRBAG

Inspect that airbag system is normal. <Ref. to AB-2, Basic Diagnostic Procedure.>

GENERAL DESCRIPTION

OnStar (R) (Diagnostics)

C: PREPARATION TOOL

1. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.