

## OUTPUT MODE

OnStar (R) (Diagnostics)

### 6. Output Mode


#### A: OPERATION

NOTE:

Output mode activates lock and unlock of door, security, horn and headlight.

1) Within 3 seconds after reading DTC, turn the ignition to OFF.

- When no DTC is stored

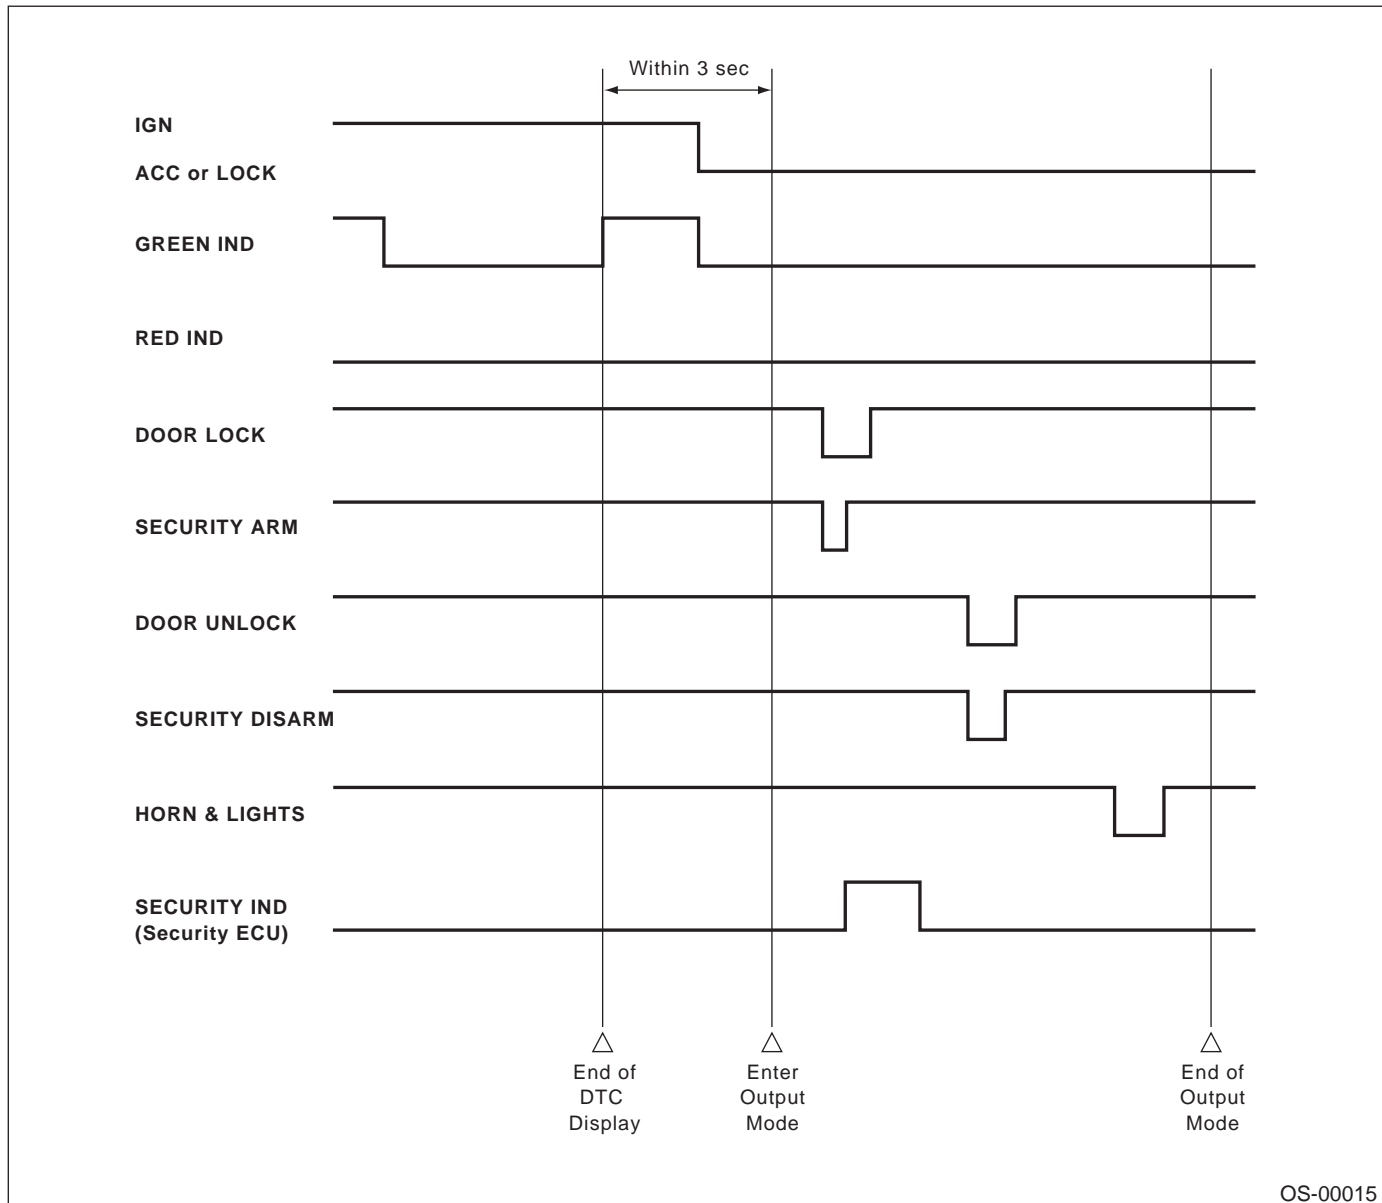


OS-00015

## OUTPUT MODE

OnStar (R) (Diagnostics)


- When DTC of former trouble is stored

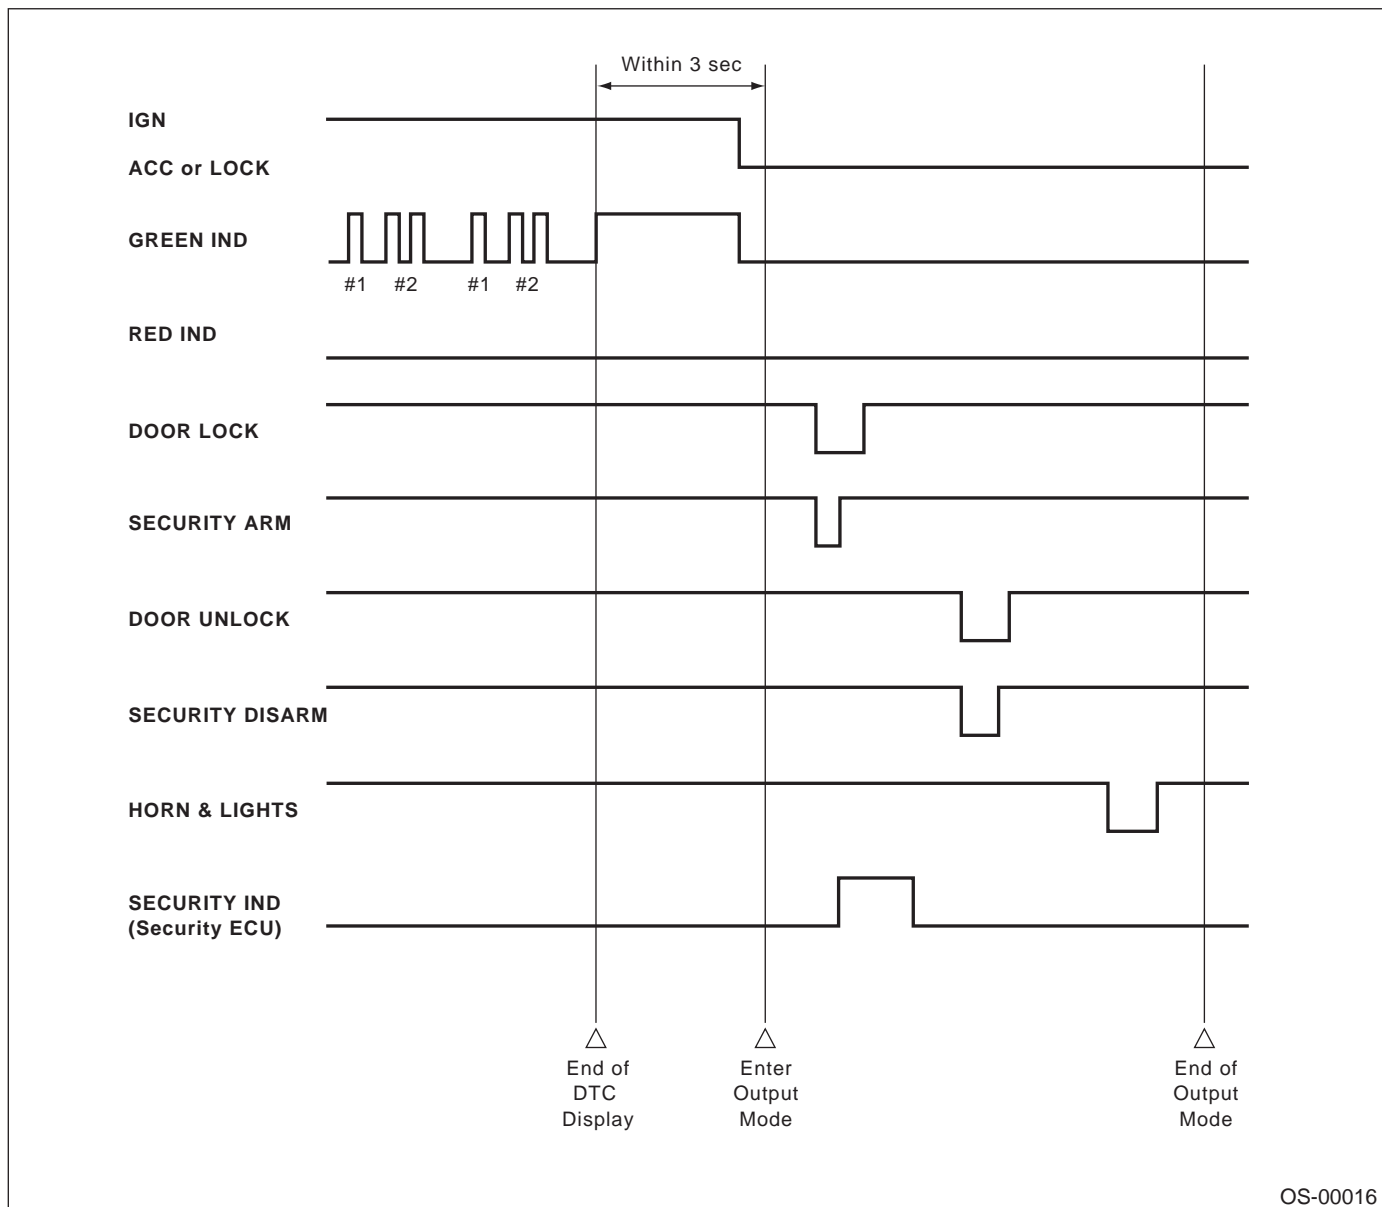

# OUTPUT MODE

OnStar (R) (Diagnostics)

- When DTC of current trouble is stored

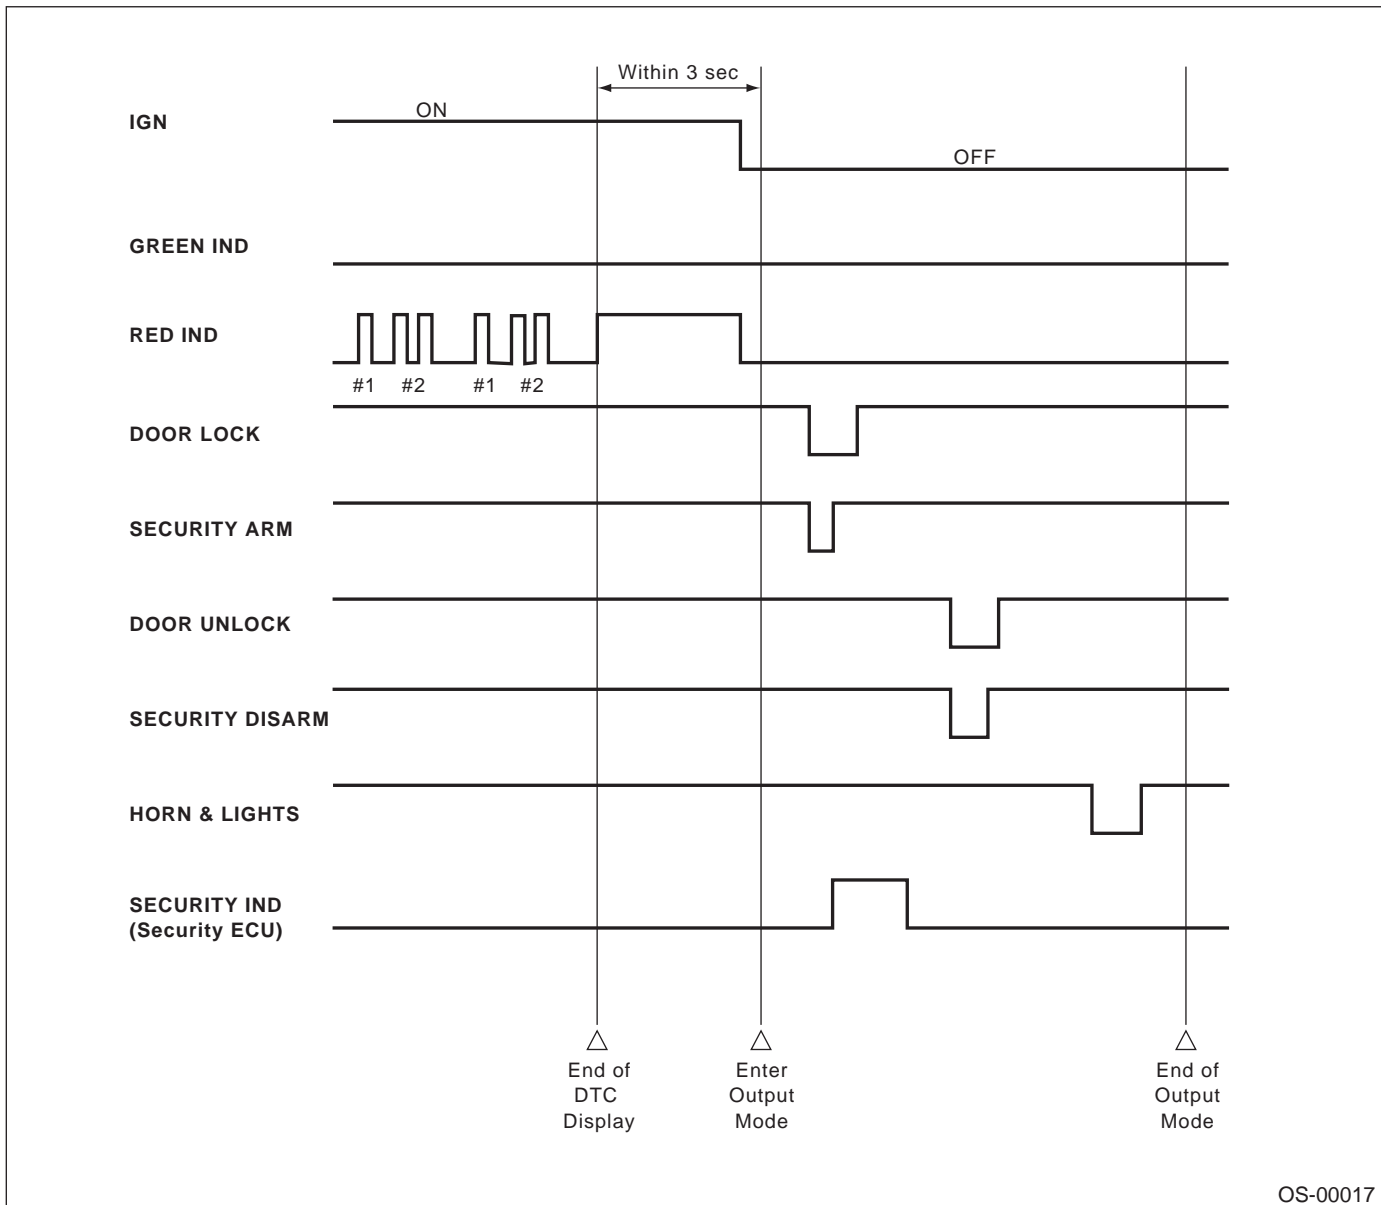

OS-00017