


## GENERAL DESCRIPTION

OnStar (R)

### 1. General Description

#### A: COMPONENT

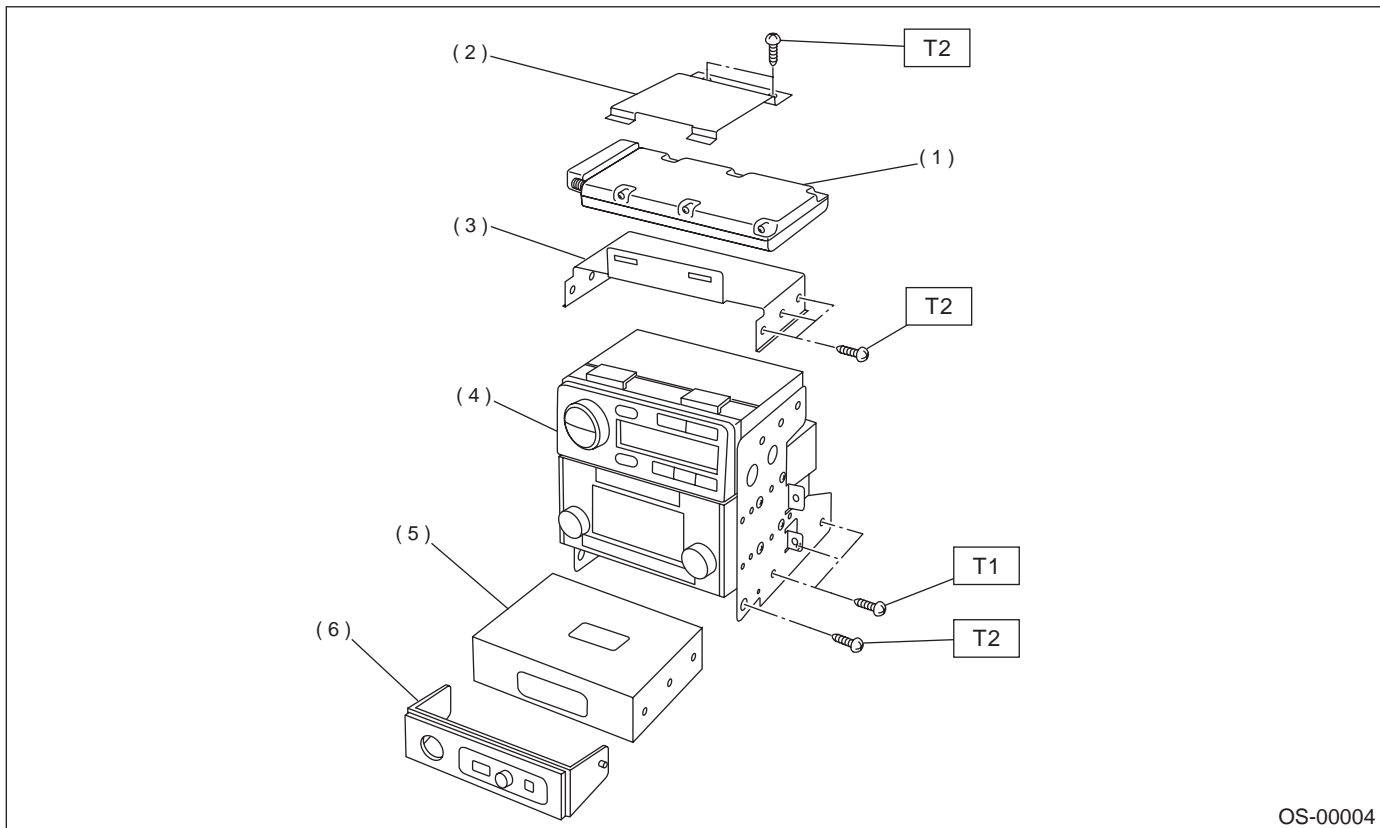

- |                                      |                                  |
|--------------------------------------|----------------------------------|
| (1) Vehicle communication unit (VCU) | (4) Audio body                   |
| (2) VCU Bracket (upper)              | (5) Vehicle interface unit (VIU) |
| (3) VCU Bracket (lower)              | (6) Button ASSY                  |

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 2.2 (0.22, 1.6)**

**T2: 4.6 (0.47, 3.4)**

## GENERAL DESCRIPTION

OnStar (R)

### B: CAUTION

- Wear work clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Be careful not to burn your hands, because each part in the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensor or units, be sure to disconnect the ground cable from battery.

### C: PREPARATION TOOL

#### 1. GENERAL PURPOSE TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.