


ANTENNA

OnStar (R)

6. Antenna

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove roof trim. <Ref. to EI-45, REMOVAL, Roof Trim.>
- 3) Disconnect connector.
- 4) Remove nut fixing antenna.

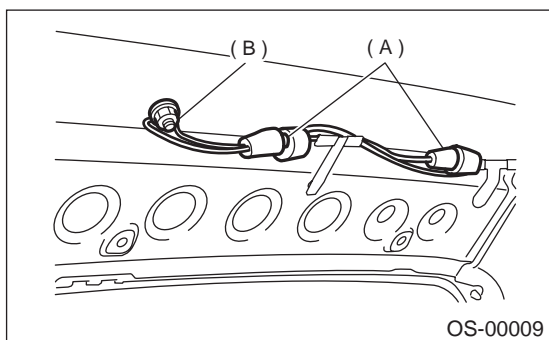

- (A) Connector
- (B) Antenna fixing nut

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.4 N·m (0.45 kgf-m, 3.3 ft-lb)

OS-8