



GENERAL DESCRIPTION

SEATS

1. General Description

A: COMPONENT

1. FRONT SEAT

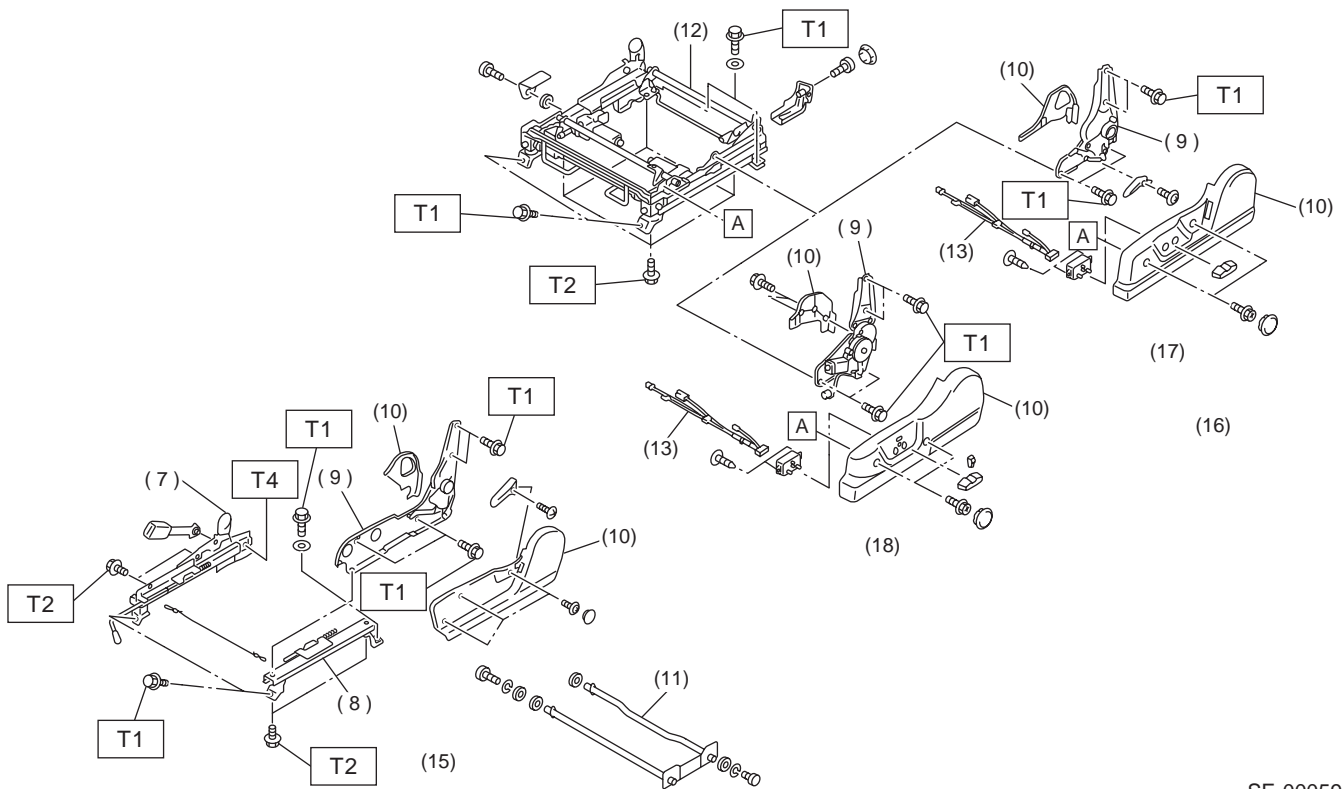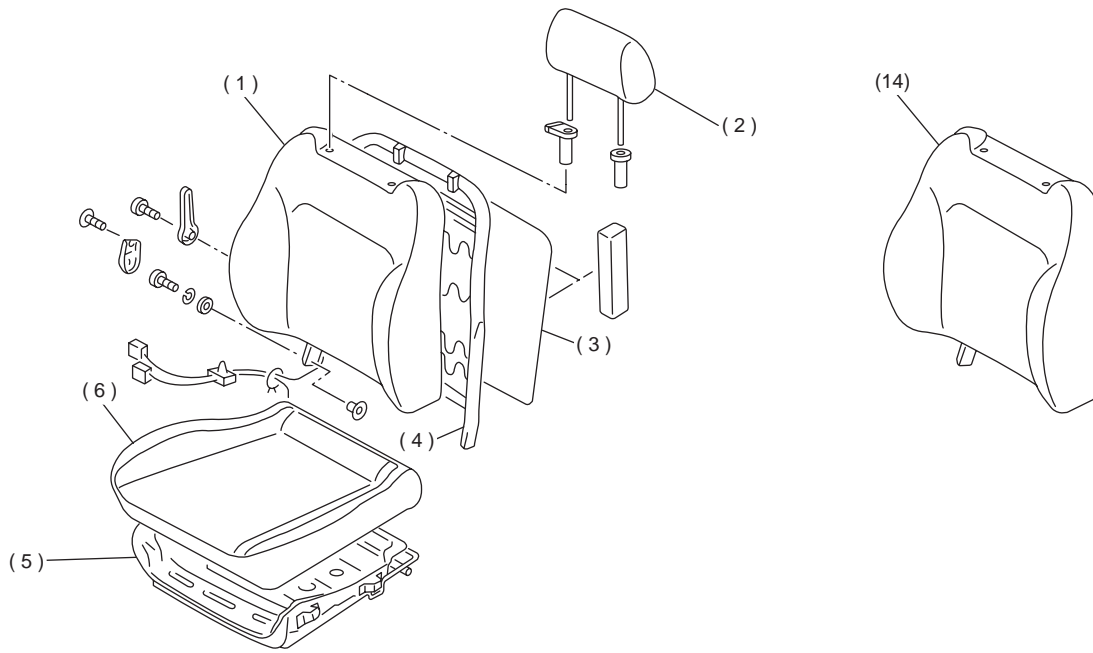

SE-00059

GENERAL DESCRIPTION


SEATS

(1) Seat back pad	(10) Hinge cover	(18) <8 WAY>
(2) Headrest	(11) Rod	
(3) Seat back board	(12) Slide and unit ASSY	<i>Tightening torque: N·m (kgf-m, ft-lb)</i>
(4) Seat back frame ASSY	(13) Power seat harness	<i>T1: 53 (5.4, 39)</i>
(5) Seat cushion frame ASSY	(14) Seat back ASSY (Model with side airbag)	<i>T2: 18 (1.8, 13)</i>
(6) Seat cushion pad	(15) STANDARD	<i>T3: 6 (0.6, 4.3)</i>
(7) Slide rail inner ASSY	(16) POWER	<i>T4: 30 (3.1, 22)</i>
(8) Slide rail outer ASSY	(17) <6 WAY>	
(9) Hinge ASSY		

GENERAL DESCRIPTION

SEATS

2. REAR SEAT (SEDAN)

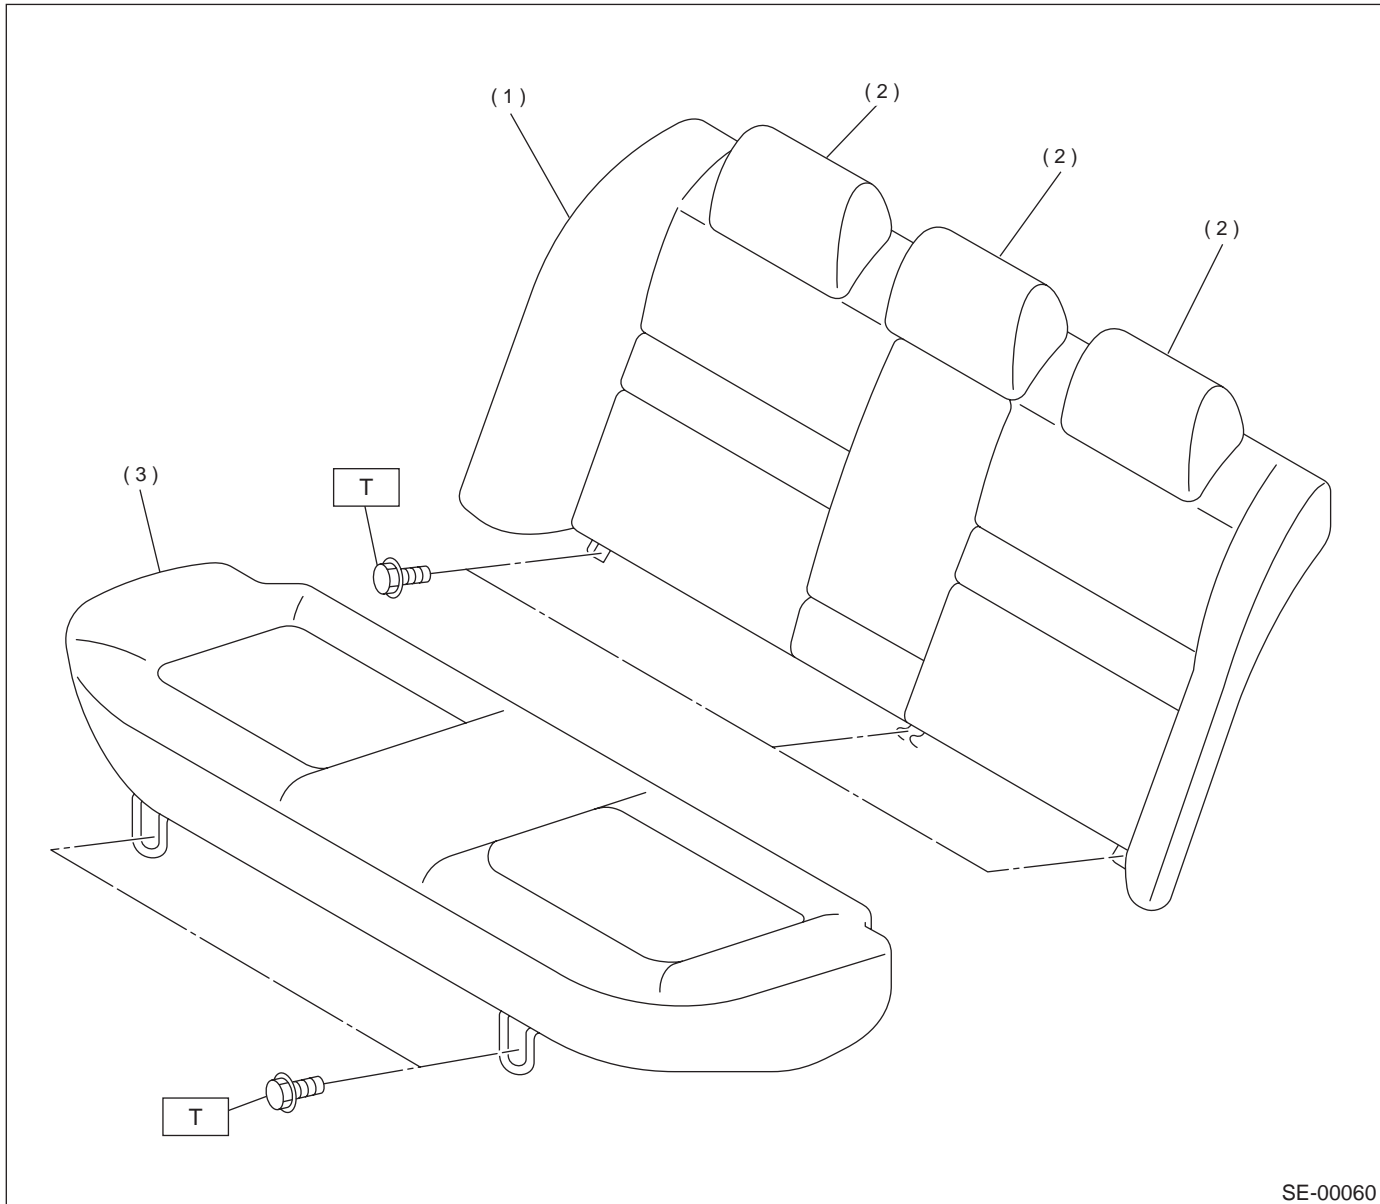

- (1) Backrest
- (2) Head restraint


- (3) Cushion

Tightening torque: N·m (kgf·m, ft·lb)
T: 24.5 (2.50, 18.1)

GENERAL DESCRIPTION

SEATS

3. REAR SEAT (WAGON)

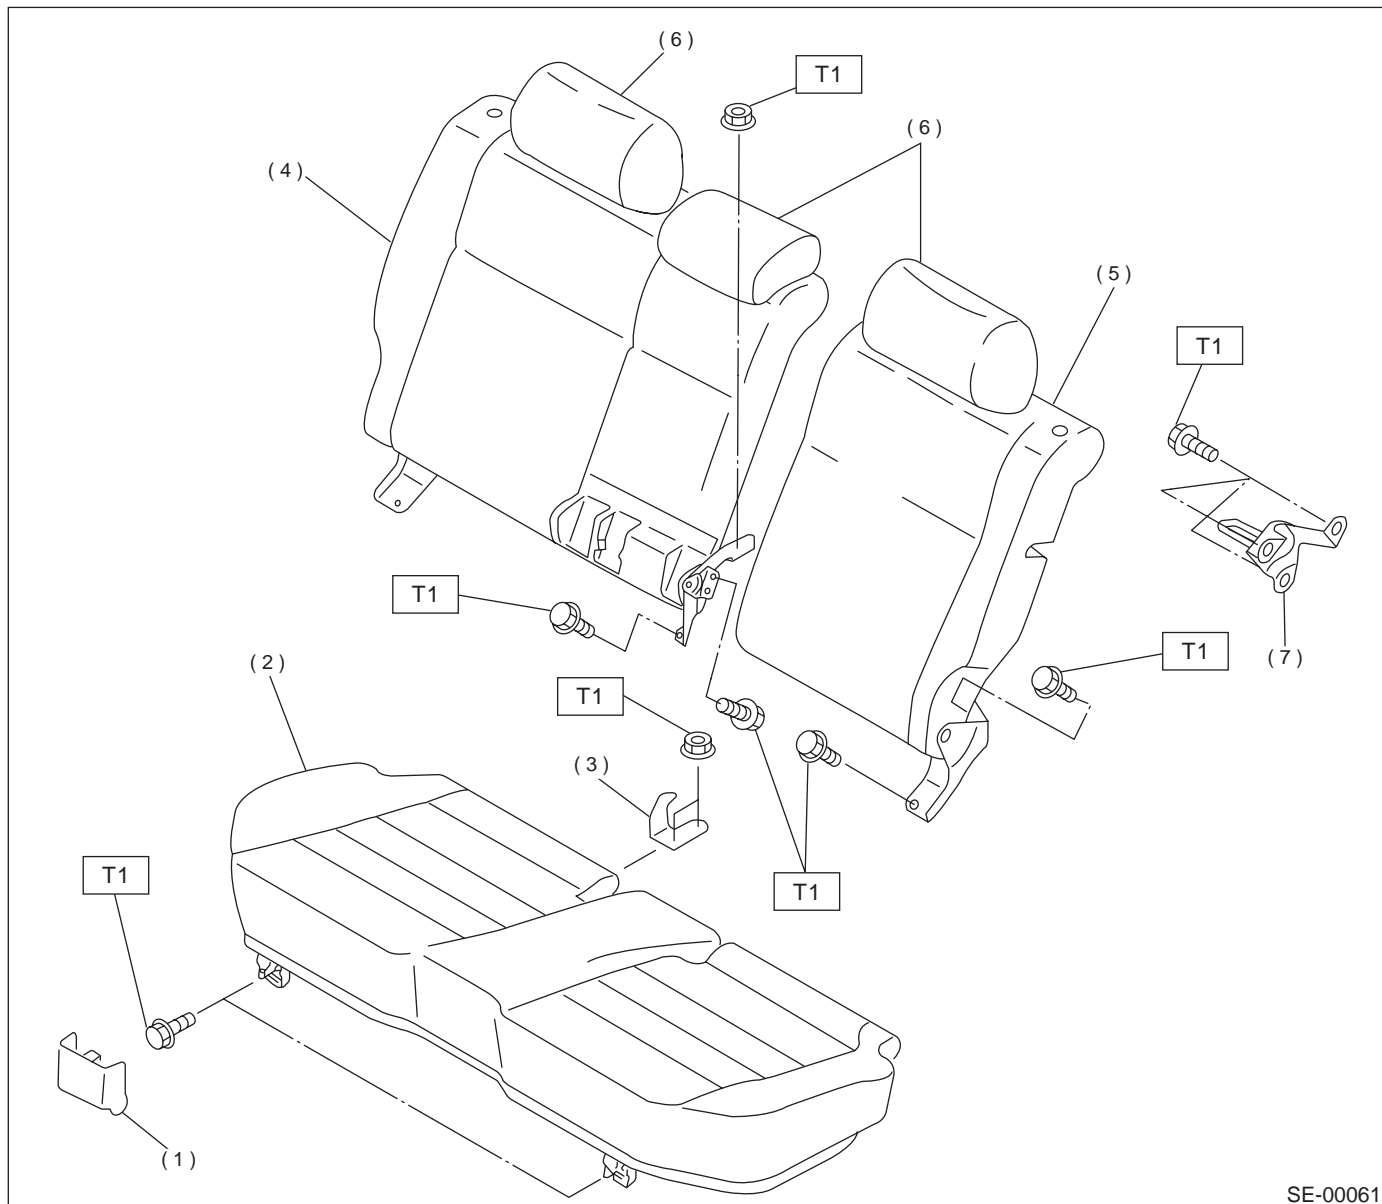

- (1) Cover
- (2) Cushion
- (3) Hook
- (4) Backrest RH

- (5) Backrest LH
- (6) Head restraint
- (7) Striker

Tightening torque: N·m (kgf·m, ft·lb)
T1: 24.5 (2.50, 18.1)

GENERAL DESCRIPTION

SEATS

B: CAUTION

- Take care not to contaminate or damage seat surface.
- While loading to or unloading to vehicle, take care not to contact body.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Long Nose Pliers	Used for removing and installing hog ring