


## FRONT OUTER HANDLE

SECURITY AND LOCKS

### 6. Front Outer Handle

#### A: REMOVAL

- 1) Remove the front door latch assembly. <Ref. to SL-32, REMOVAL, Front Door Latch Assembly.>
- 2) Remove the two bolts. Remove the front outer handle (A).

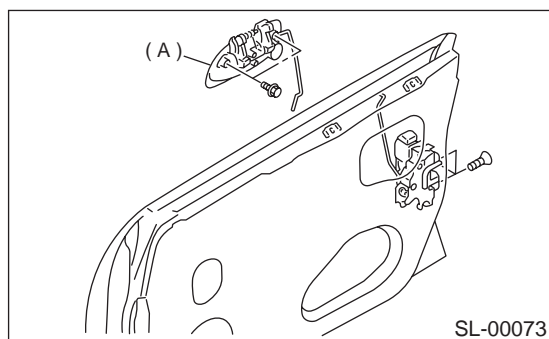

#### CAUTION:

Do not use excessive force to remove the door panel. This will deform it.

#### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the outer handle works properly after installation.

#### C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.

SL-31