


## FRONT DOOR LATCH ASSEMBLY

### SECURITY AND LOCKS

## 7. Front Door Latch Assembly

### A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 4) Remove the front inner remote. <Ref. to SL-30, REMOVAL, Front Inner Remote.>
- 5) Remove the front door glass. <Ref. to GW-12, REMOVAL, Front Door Glass.>
- 6) Remove three nuts, and detach the front door sash (Rear).
- 7) Remove the three screws and bolt.

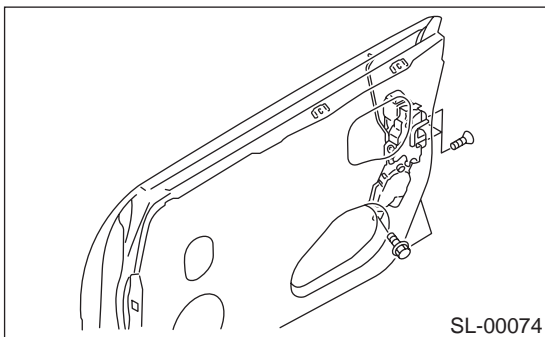

- 8) Disconnect the connector. Remove the front door latch assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the lock works properly after installation.

### C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.

SL-32