


REAR INNER REMOTE

SECURITY AND LOCKS

9. Rear Inner Remote

A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove the two rod joints.
- 4) Remove the screw, and detach the inner remote.

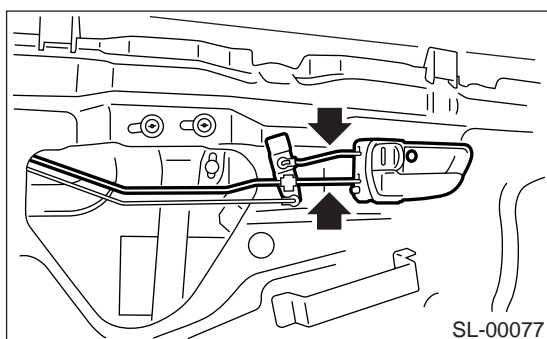

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the inner remote works properly after installation.

C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.
- 3) Make sure the child safety lock on rear doors work properly, when applicable.

SL-34