


## REAR OUTER HANDLE

SECURITY AND LOCKS

### 10.Rear Outer Handle

#### A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove the rear inner remote. <Ref. to SL-34, REMOVAL, Rear Inner Remote.>
- 4) Remove the rear door latch assembly. <Ref. to SL-36, REMOVAL, Rear Door Latch Assembly.>
- 5) Remove the two bolts and nut. Remove the rear outer handle.

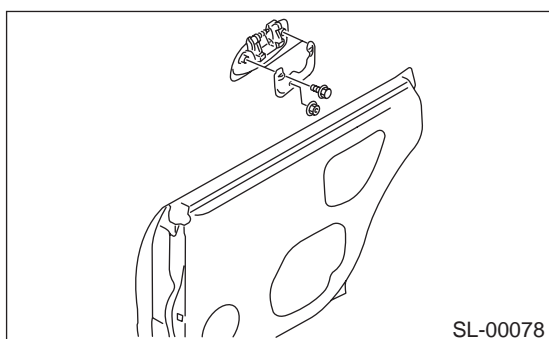

#### CAUTION:

Do not use excessive force to remove the door panel. This will deform it.

#### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the outer handle works properly after installation.

#### C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.

SL-35