


## REAR DOOR LATCH ASSEMBLY

### SECURITY AND LOCKS

## 11.Rear Door Latch Assembly

### A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 4) Remove the rear inner remote. <Ref. to SL-34, REMOVAL, Rear Inner Remote.>
- 5) Remove the three screws and bolt.

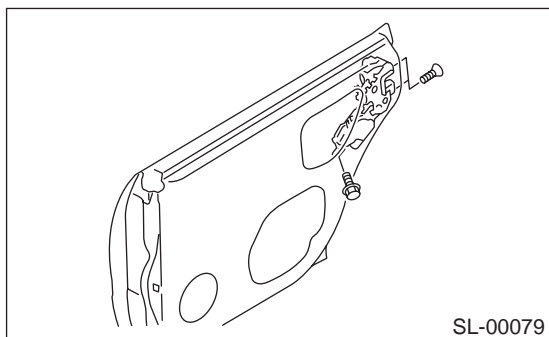

- 6) Disconnect the connector. Remove the rear door latch assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the lock works properly after installation.

### C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.

SL-36