


REAR GATE OUTER HANDLE

SECURITY AND LOCKS

13.Rear Gate Outer Handle

A: REMOVAL

- 1) Remove the rear gate lower trim. <Ref. to EI-47, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear gate latch rod.
- 3) Remove the nut holding the rear gate outer handle, and then remove the rear gate outer handle.

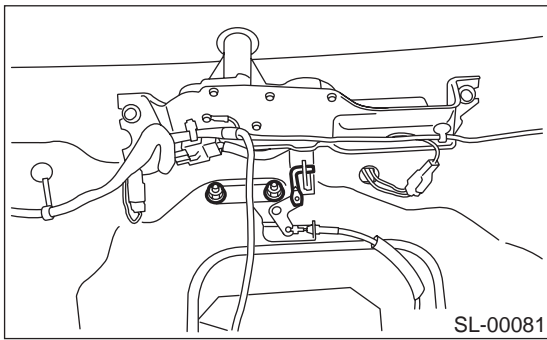

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the outer handle works properly after installation.

C: INSPECTION

- 1) Inspect the rod for deformation.
- 2) Make sure the lever and rod move smoothly.