


14.Rear Gate Latch Assembly

A: REMOVAL

- 1) Disconnect ground cable from battery.
- 2) Remove the rear gate lower trim. <Ref. to EI-47, REMOVAL, Rear Gate Trim.>
- 3) Remove the rear gate key cylinder rod.
- 4) Remove the rear gate outer handle. <Ref. to SL-38, REMOVAL, Rear Gate Outer Handle.>
- 5) Remove the three bolts.

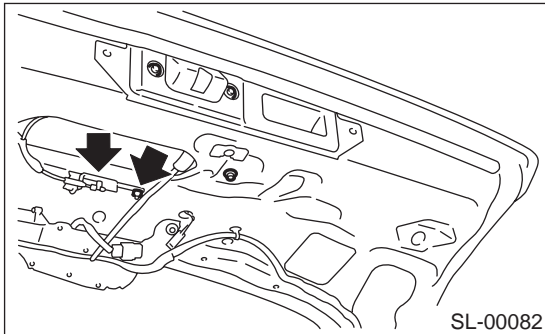

- 6) Remove the two connectors and pull out the latch.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the lock works properly after installation.

C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.