


TRUNK LID LOCK ASSEMBLY

SECURITY AND LOCKS

16.Trunk Lid Lock Assembly

A: REMOVAL

- 1) Remove the trunk lid key cylinder rod.
 - 2) Remove the lock assembly cover (A).
 - 3) Remove the nut while holding the lock assembly.
- Remove the lock assembly (B).

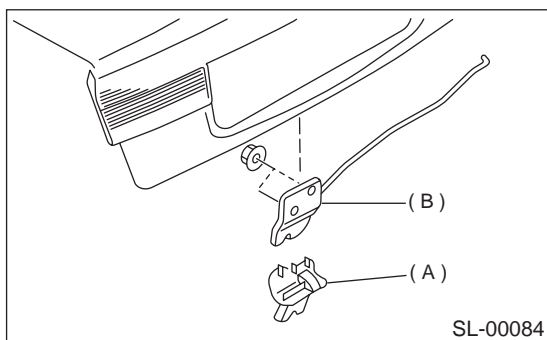

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

- Apply grease to parts that rub.
- Make sure the lock works properly after installation.

C: INSPECTION

- 1) Check the striker for bending or abnormal wear.
- 2) Check the safety lever for improper movement.
- 3) Check other levers and the spring for rust formation and unsmooth movement.

SL-41